

# WIRING DIAGRAMS

All diagrams contained in this manual are based on the latest product information available at the time of publication approval. The right is reserved to make changes at any time without notice.

## CONTENTS

| <u>SUBJECT</u> | <u>DIAGRAM</u> |
|----------------|----------------|
| CK Truck ..... | 15598474       |
| G Van .....    | 15598475       |
| P Model .....  | 15598476       |

## WIRING DIAGRAMS DESCRIPTION

These diagrams use a new format. The diagram is surrounded by a alpha/numeric location grid. The wires have alpha/numeric addresses at the connectors, showing where the other end of the wire is located according to the grid.

The connectors are shown with end-on views. Each circuit is located in the connector by circuit number.

The diagrams are laid out to represent the physical harness, not the electrical schematic. The only electrical connections shown are the splices in the harness. The individual wires are shown at the connectors.


The wire address is as follows:


9A B9 0.5 BRN. 9A is the wire circuit number. B9 is the location of the other end of the wire. 0.5 is the size of the wire in millimeters squared. BRN is the color of the wire insulation. If the wire ends at a connector

which joins to a connector on another page, the page number and alpha/numeric address of the other connector will be shown.

Abbreviations and symbols used for indicating wire insulation colors and patterns are as follows:

|          |         |          |          |
|----------|---------|----------|----------|
| BLK..... | Black   | ORG..... | Orange   |
| BRN..... | Brown   | PPL..... | Purple   |
| CH.....  | Check   | TR.....  | Tracer   |
| CR.....  | Cross   | YEL..... | Yellow   |
| GRN..... | Green   | //.....  | Parallel |
| NAT..... | Natural | WHT..... | White    |
| LT.....  | Light   | BLU..... | Blue     |
| SGL..... | Single  | STR..... | Stripe   |
| ORN..... | Orange  | PNK..... | Pink     |
| GRA..... | Gray    | DK.....  | Dark     |

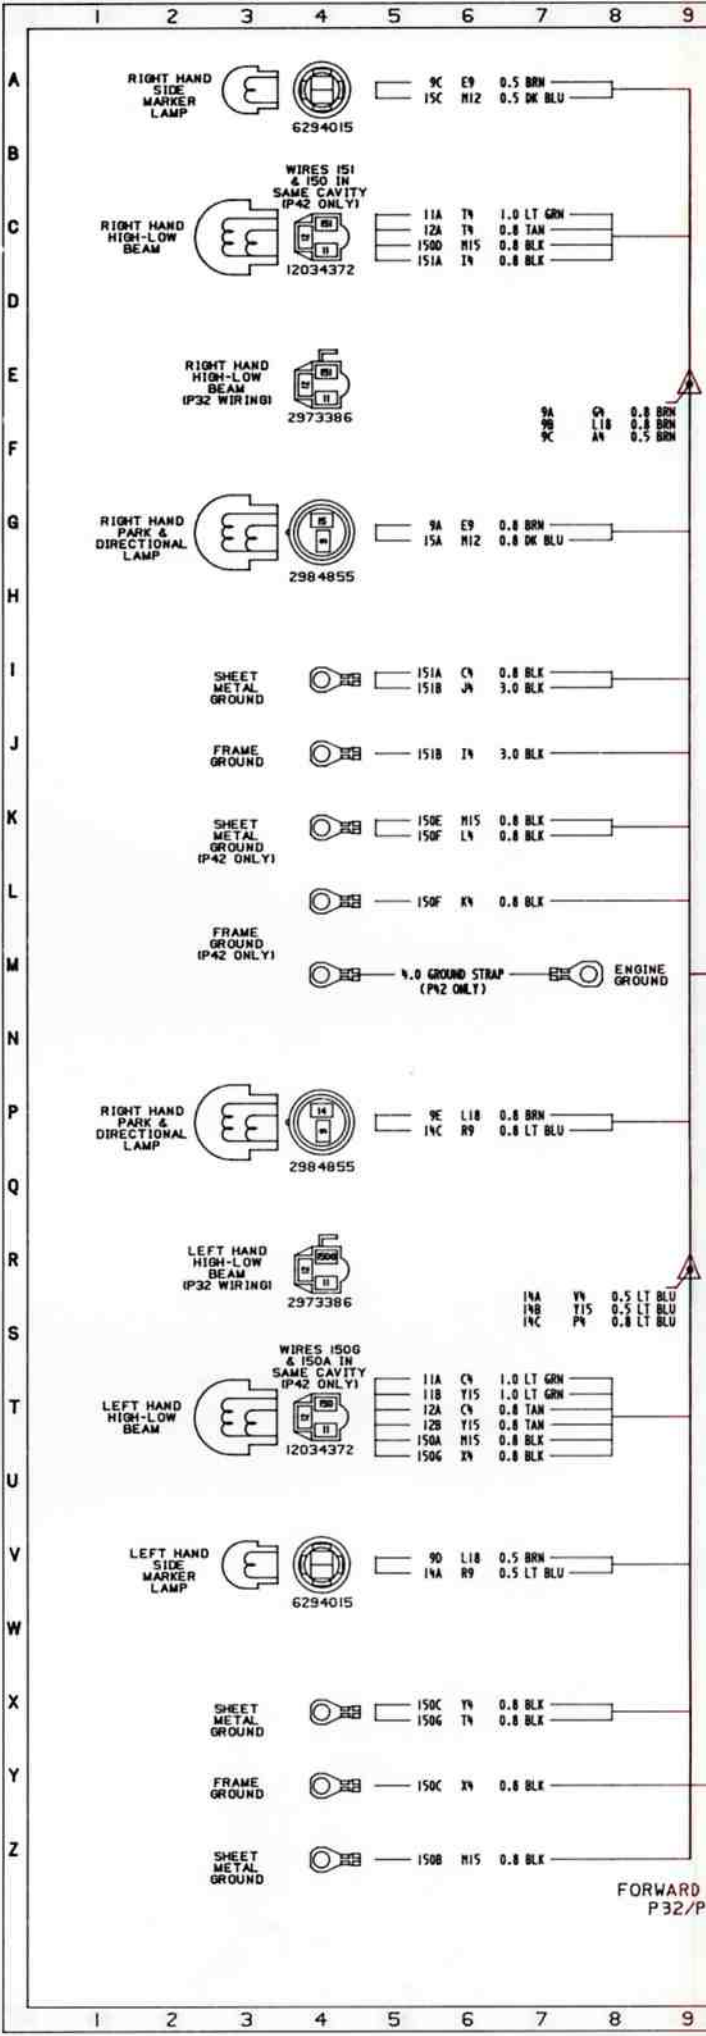

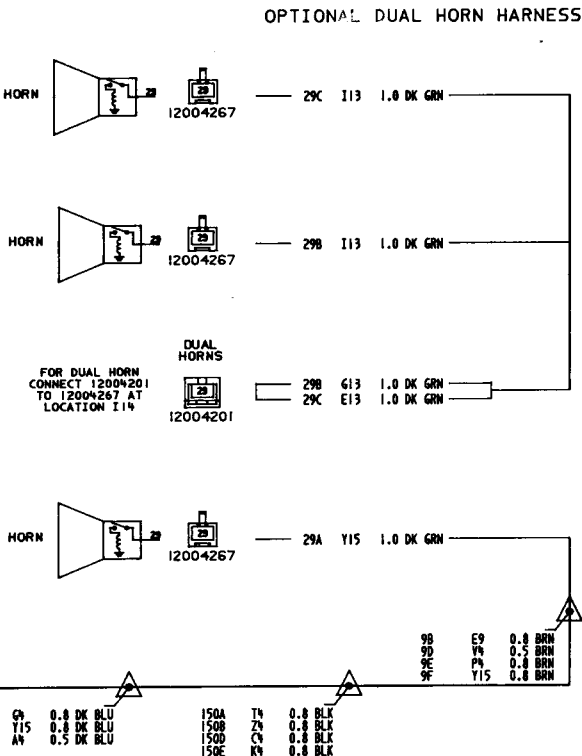


BATTERY




SHEET METAL GROUND

 
BATTERY



BATTERY

 

BATTERY

 


BATTERY

|      |     |     |     |
|------|-----|-----|-----|
| 939A | K31 | 0.8 | YEL |
| 939C | P31 | 0.8 | YEL |
| 939D | E31 | 0.8 | YEL |
| 939E | S40 | 0.8 | YEL |
| 939F | H31 | 0.8 | YEL |

|    |     |     |        |
|----|-----|-----|--------|
| 2H | T31 | 1.0 | RED    |
| 2I | T31 | 0.8 | RED    |
| 2J | L22 | 2.0 | RED    |
| 2K | L22 | 3.0 | DK BLU |

STARTER MOTOR & SOLENOID

 
WIRE 2L & 2J & 2K FUSIBLE LINKS



STARTER MOTOR & SOLENOID



 STARTER MOTOR & SOLENOID




STARTER MOTOR & SOLENOID

|     |     |     |         |
|-----|-----|-----|---------|
| 39C | E31 | 0.8 | PNK/BLK |
| 39D | S40 | 0.8 | PNK/BLK |
| 39E | Y41 | 0.8 | PNK/BLK |




COOLANT TEMPERATURE SENDER

 2962961



AIR TEMPERATURE SWITCH WAS

 6294826



ENGINE SPEED SWITCH SOLENOID NB2

8911288



ENGINE SPEED SWITCH RELAY NB2

8917544



AIR DIVERTEI SOLENOID

12015792



 
AIR DIVERTER VALVE SOLENOIDS WAS

12015792



AIR DIVERTEI SOLENOID

12015792



TACHOMETER TO COIL DIRECT GROUND AIR SWITCH SOLENOID 777 INITIATION

12040947

AIR DIVERTEI MODULE

 


BRAKE PRESSURE WARNING SWITCH




12004635


GROUND



GROUND

 


FORWARD LAMP

 


8917233

TO SEE PAGE LOCATION  
1/P 4 Y4  
5 Y4


ENG1

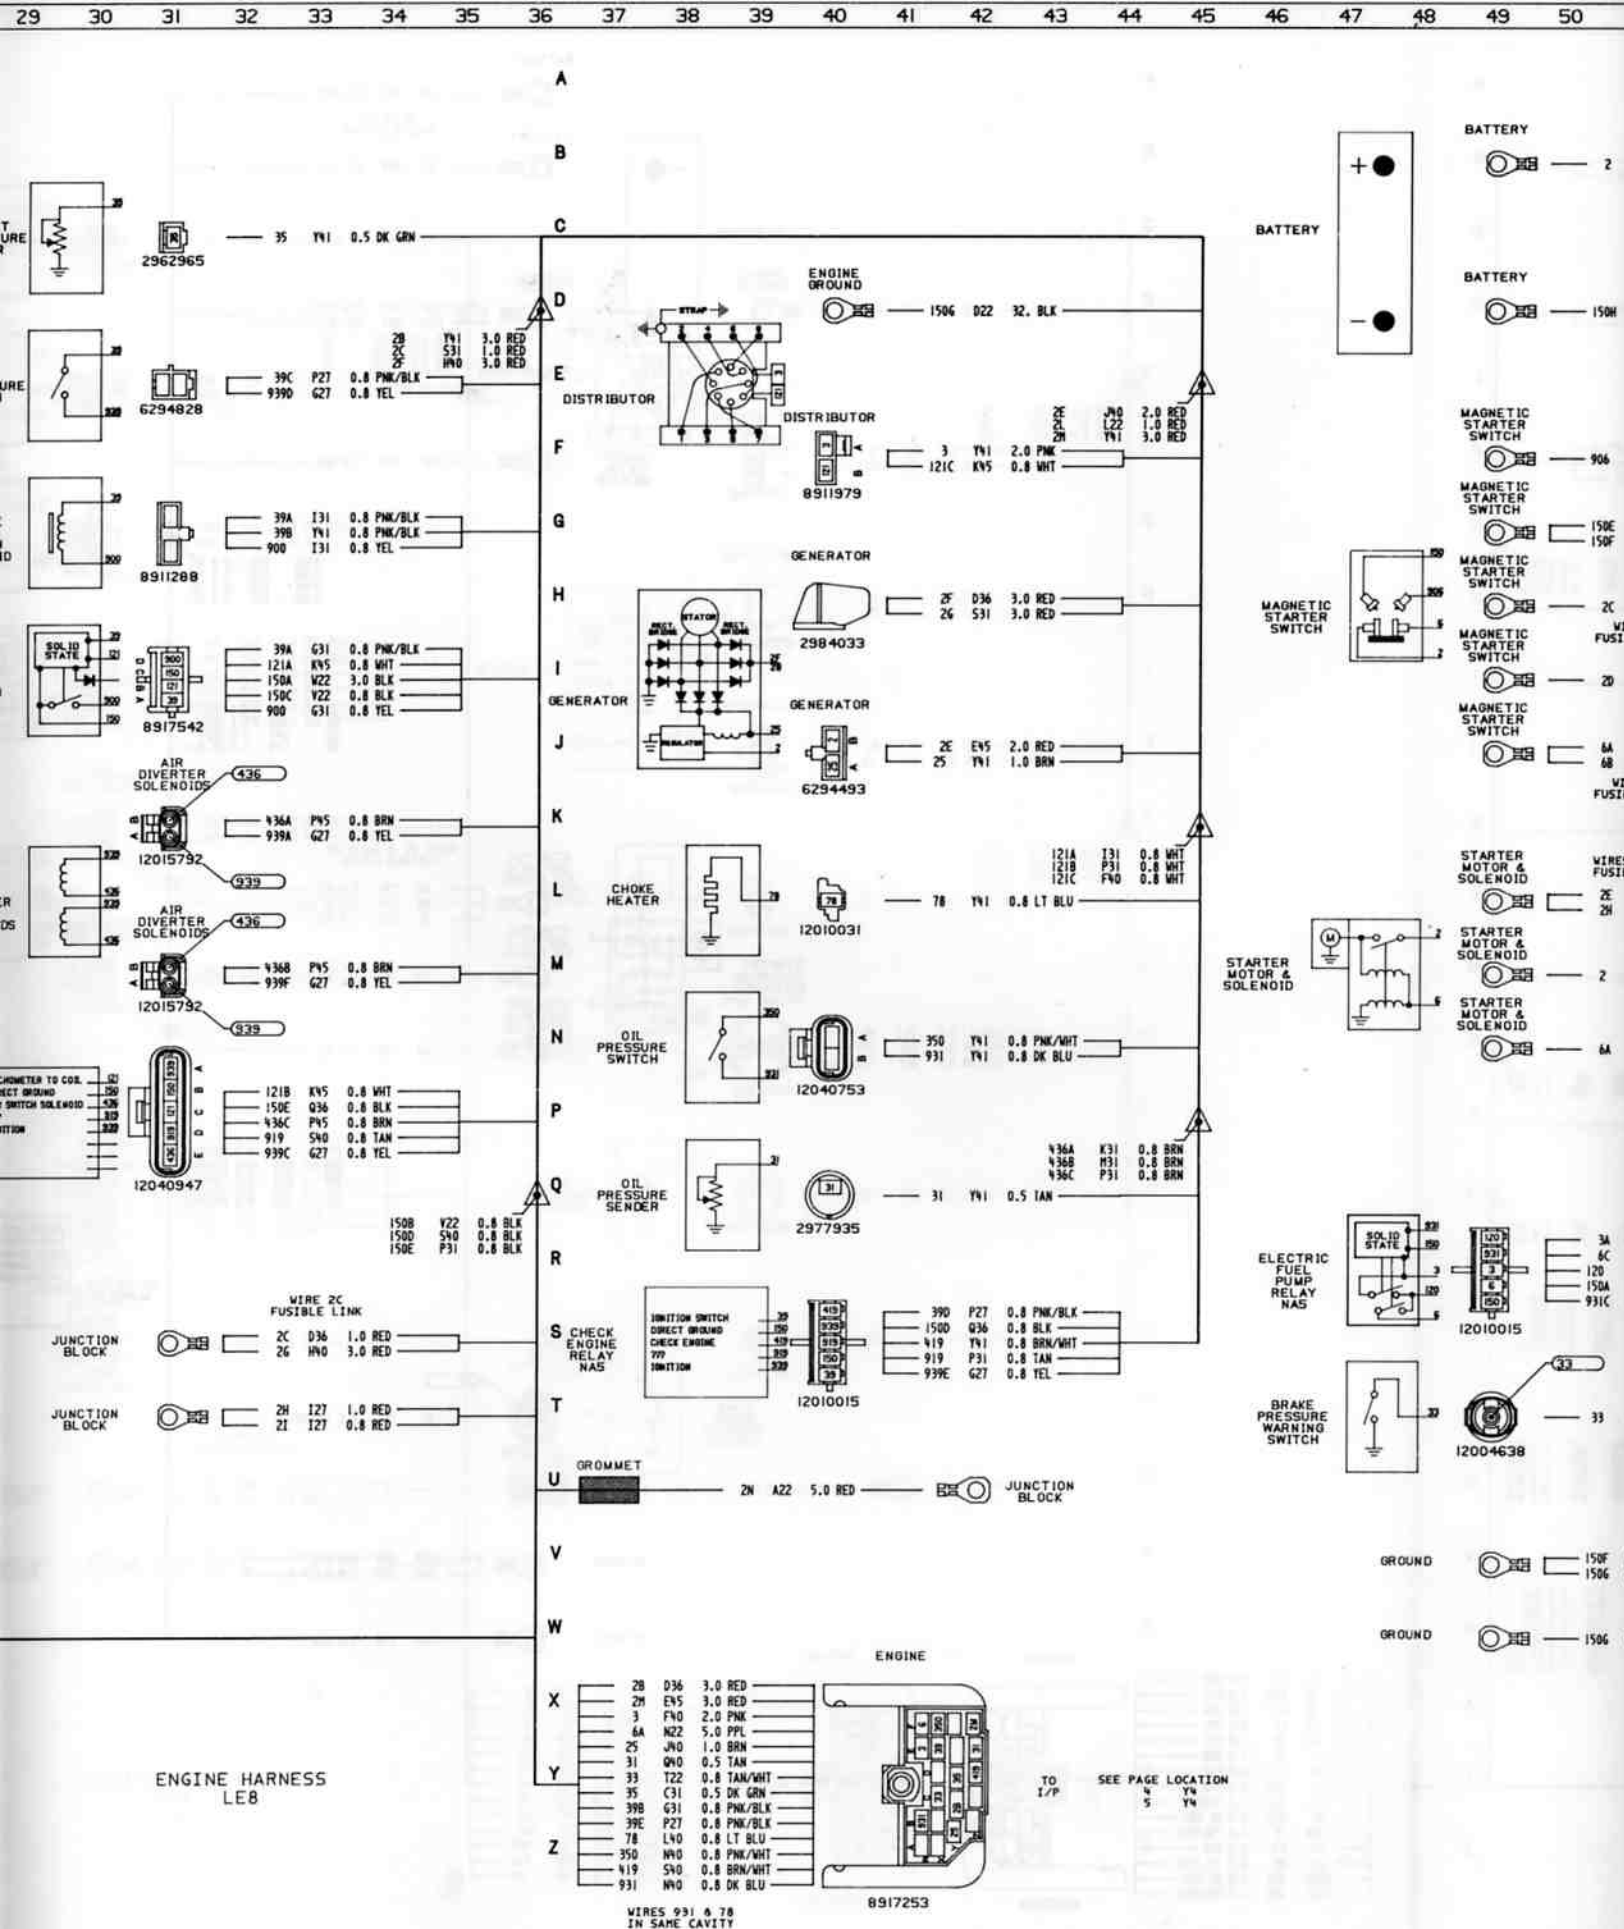

TO  
I/P

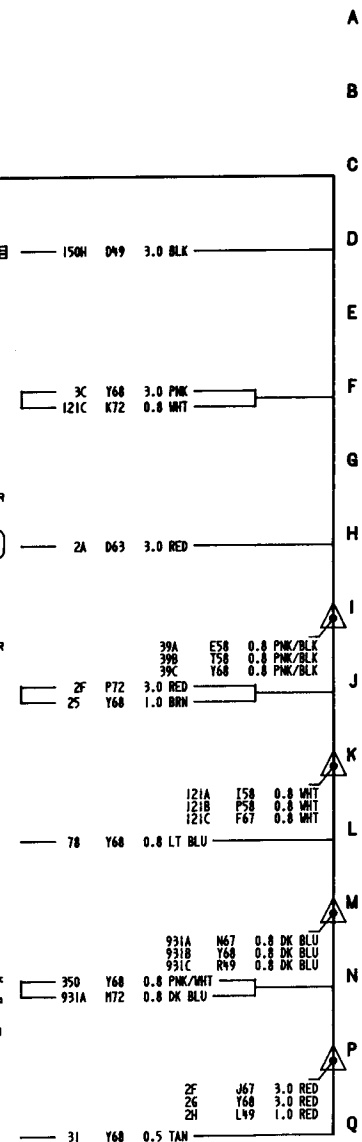


ENGINE

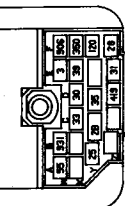


TO SEE PAGE LOCATION  
L/P 4 Y4  
5 Y4

8917253


|      |     |     |     |
|------|-----|-----|-----|
| 2E   | 69  | 3.0 | RED |
| 2H   | X18 | 3.0 | RED |
| 3B   | R27 | 3.0 | PMK |
| 6A   | K4  | 3.0 | PMK |
| 6B   | K4  | 5.0 | PPK |
| 25   | P4  | 1.0 | BRN |
| 30   | P31 | 0.8 | PMK |
| 31   | U22 | 0.5 | TAN |
| 33   | H31 | 0.8 | TAN |
| 35   | S22 | 0.5 | DK  |
| 39B  | X9  | 0.8 | PMK |
| 55   | K31 | 0.8 | OR  |
| 68   | R4  | 0.8 | TEL |
| 503F | Y36 | 0.8 | DK  |
| 508C | G36 | 0.8 | BRN |

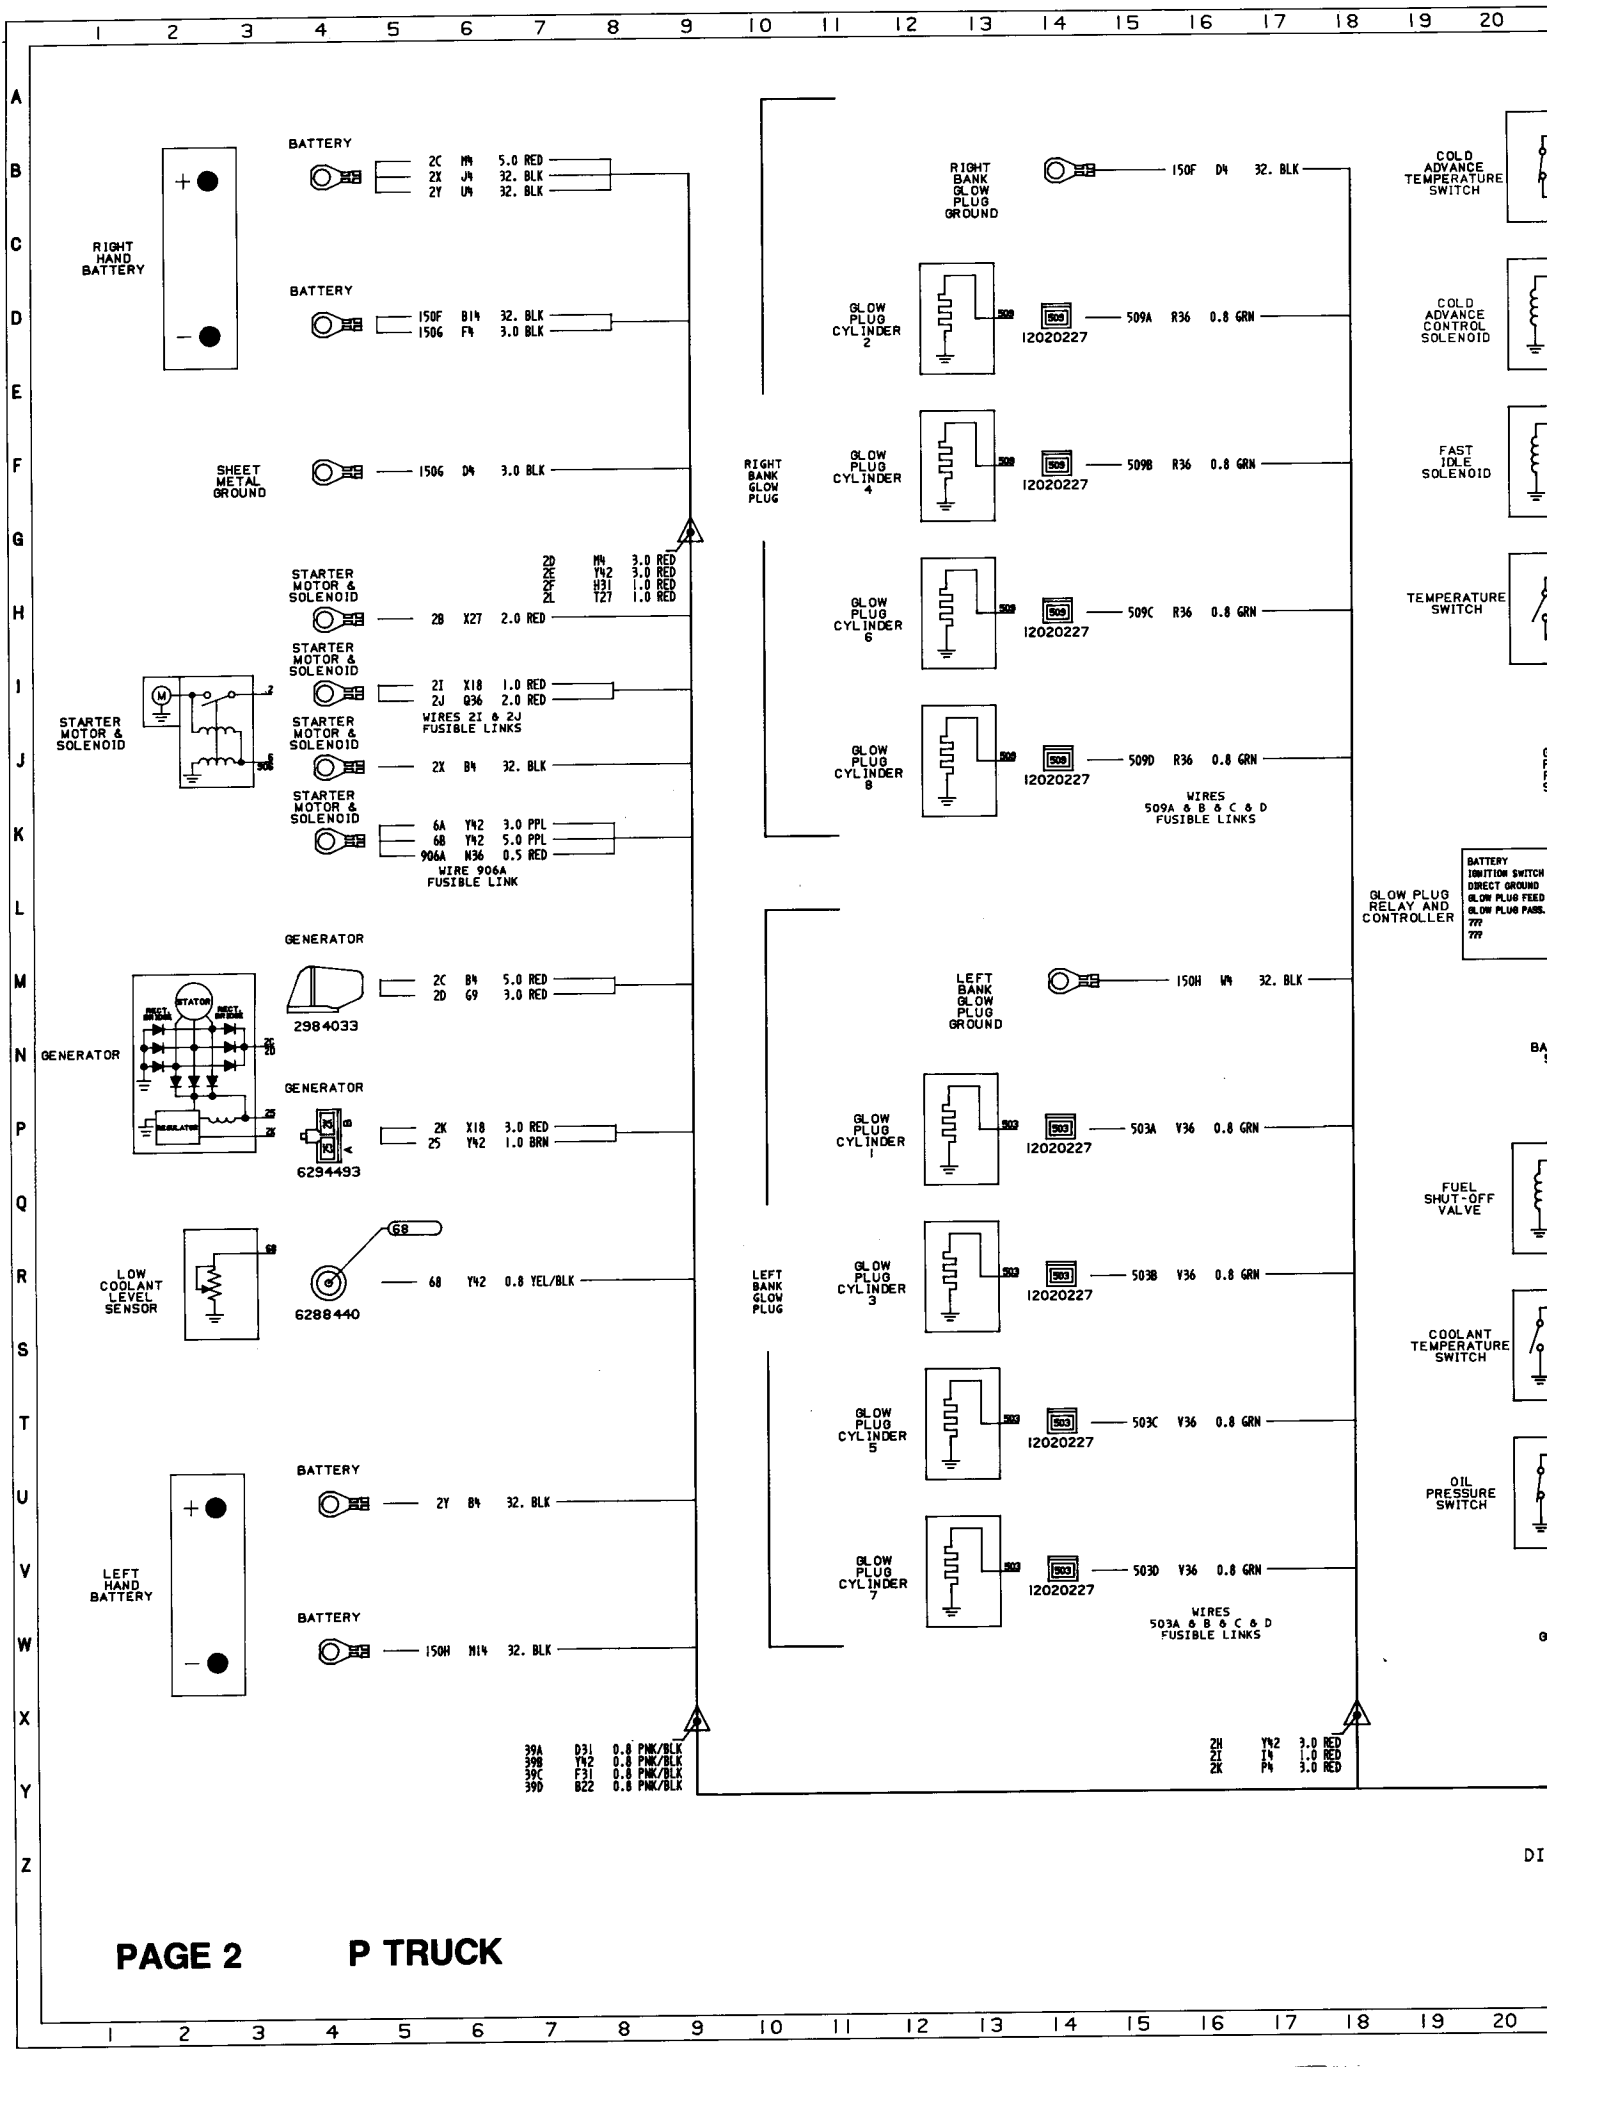

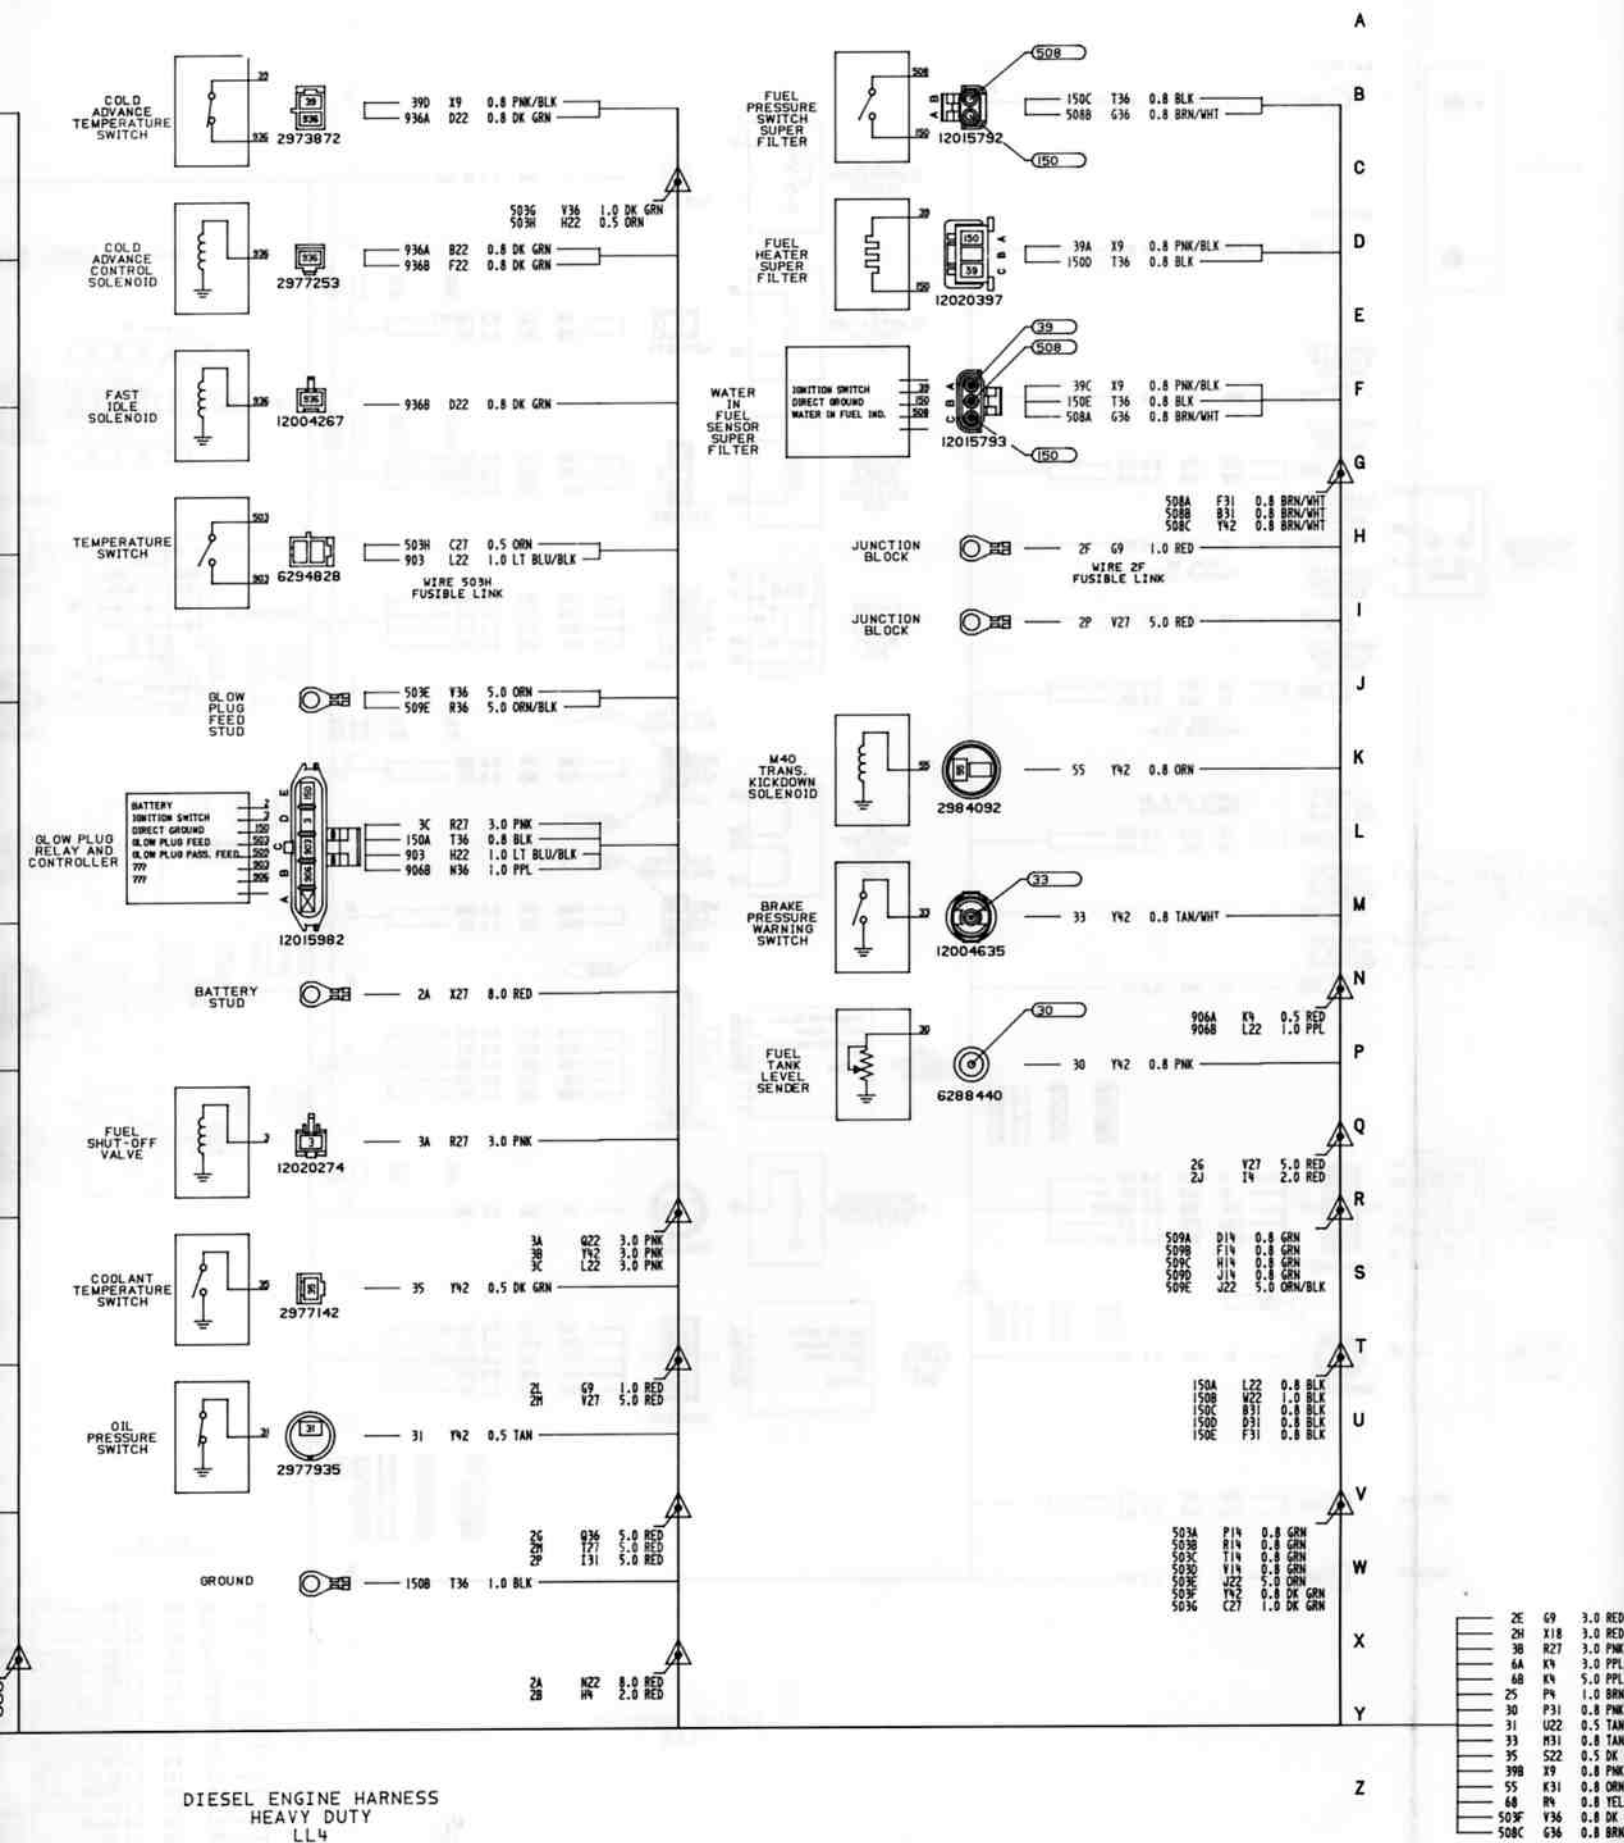

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
P  
Q  
R  
S  
T  
U  
V  
W  
X  
Y  
Z

 BATTERY



BATTERY

2N U69 5.0 RED  
WIRE 2N  
FUSIBLE LINK

BATTERY

2A M49 32. BLK

BATTERY

150F F49 3.0 BLK  
150G D67 32. BLK

SHEET  
METAL  
GROUND

150F D49 3.0 BLK

936A E58 0.8 YEL  
936B S58 0.8 YEL  
936C M58 0.8 YEL  
936D K58 0.8 YEL

 
2H V58 1.0 RED  
2I V58 0.8 RED  
2J L49 2.0 RED  
2K L49 3.0 DK BLU

STARTER  
MOTOR &  
SOLENOID

WIRE 2L & 2J & 2K  
FUSIBLE LINKS

2J I54 2.0 RED  
2K I54 3.0 DK BLU  
2L E72 1.0 RED

STARTER  
MOTOR &  
SOLENOID



STARTER  
MOTOR &  
SOLENOID

 
2A B49 32. BLK

STARTER  
MOTOR &  
SOLENOID

6A Y68 5.0 PPL

39 Y68 0.8 PPK/BLK  
39A K58 0.8 PPK/BLK  
39B M58 0.8 PPK/BLK  
39C Q58 0.8 PPK/BLK  
39F S67 0.8 PPK/BLK

PARK  
BRAKE  
WARNING  
SWITCH



33 Y68 0.8 TAN/WHI

 
GROUND

150B Q58 0.8 BLK  
150C I58 0.8 BLK

GROUND


150A I58 3.0 BLK

COOLANT  
TEMPERATURE  
SENDER




6288704

 AIR  
TEMPERATURE  
SWITCH  
NAS




6294828

 ENGINE  
SPEED  
SWITCH  
SOLENOID  
NB2




8911288

 ENGINE  
SPEED  
SWITCH  
RELAY  
NB2




8917542

 AIR  
DIVERter  
SOLENOID




12015792

 AIR  
DIVERter  
VALVE  
SOLENOIDS  
NAS



12015792

 AIR  
DIVERter  
MODULE



12040947

AIR  
DIVERter  
MODULE

12040753

JUNCTION  
BLOCK




JUNCTION  
BLOCK



ENGINE


|      |     |             |
|------|-----|-------------|
| 2E   | G9  | 3.0 RED     |
| 2H   | X18 | 3.0 RED     |
| 3B   | R27 | 3.0 PPK     |
| 6A   | K4  | 3.0 PPL     |
| 6B   | K4  | 5.0 PPL     |
| 25   | P4  | 1.0 BRN     |
| 30   | P31 | 0.8 PPK     |
| 31   | U22 | 0.5 TAN     |
| 33   | M31 | 0.8 TAN/WHI |
| 35   | S22 | 0.5 DK GRN  |
| 39B  | X9  | 0.8 PPK/BLK |
| 55   | K31 | 0.8 GRN     |
| 68   | R4  | 0.8 YEL/BLK |
| 503F | V36 | 0.8 DK GRN  |
| 508C | G36 | 0.8 BRN/WHI |

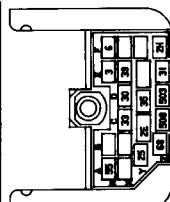


8917253

TO  
I/P SEE PAGE LOCATION  
4 Y4  
5 Y4


ENG

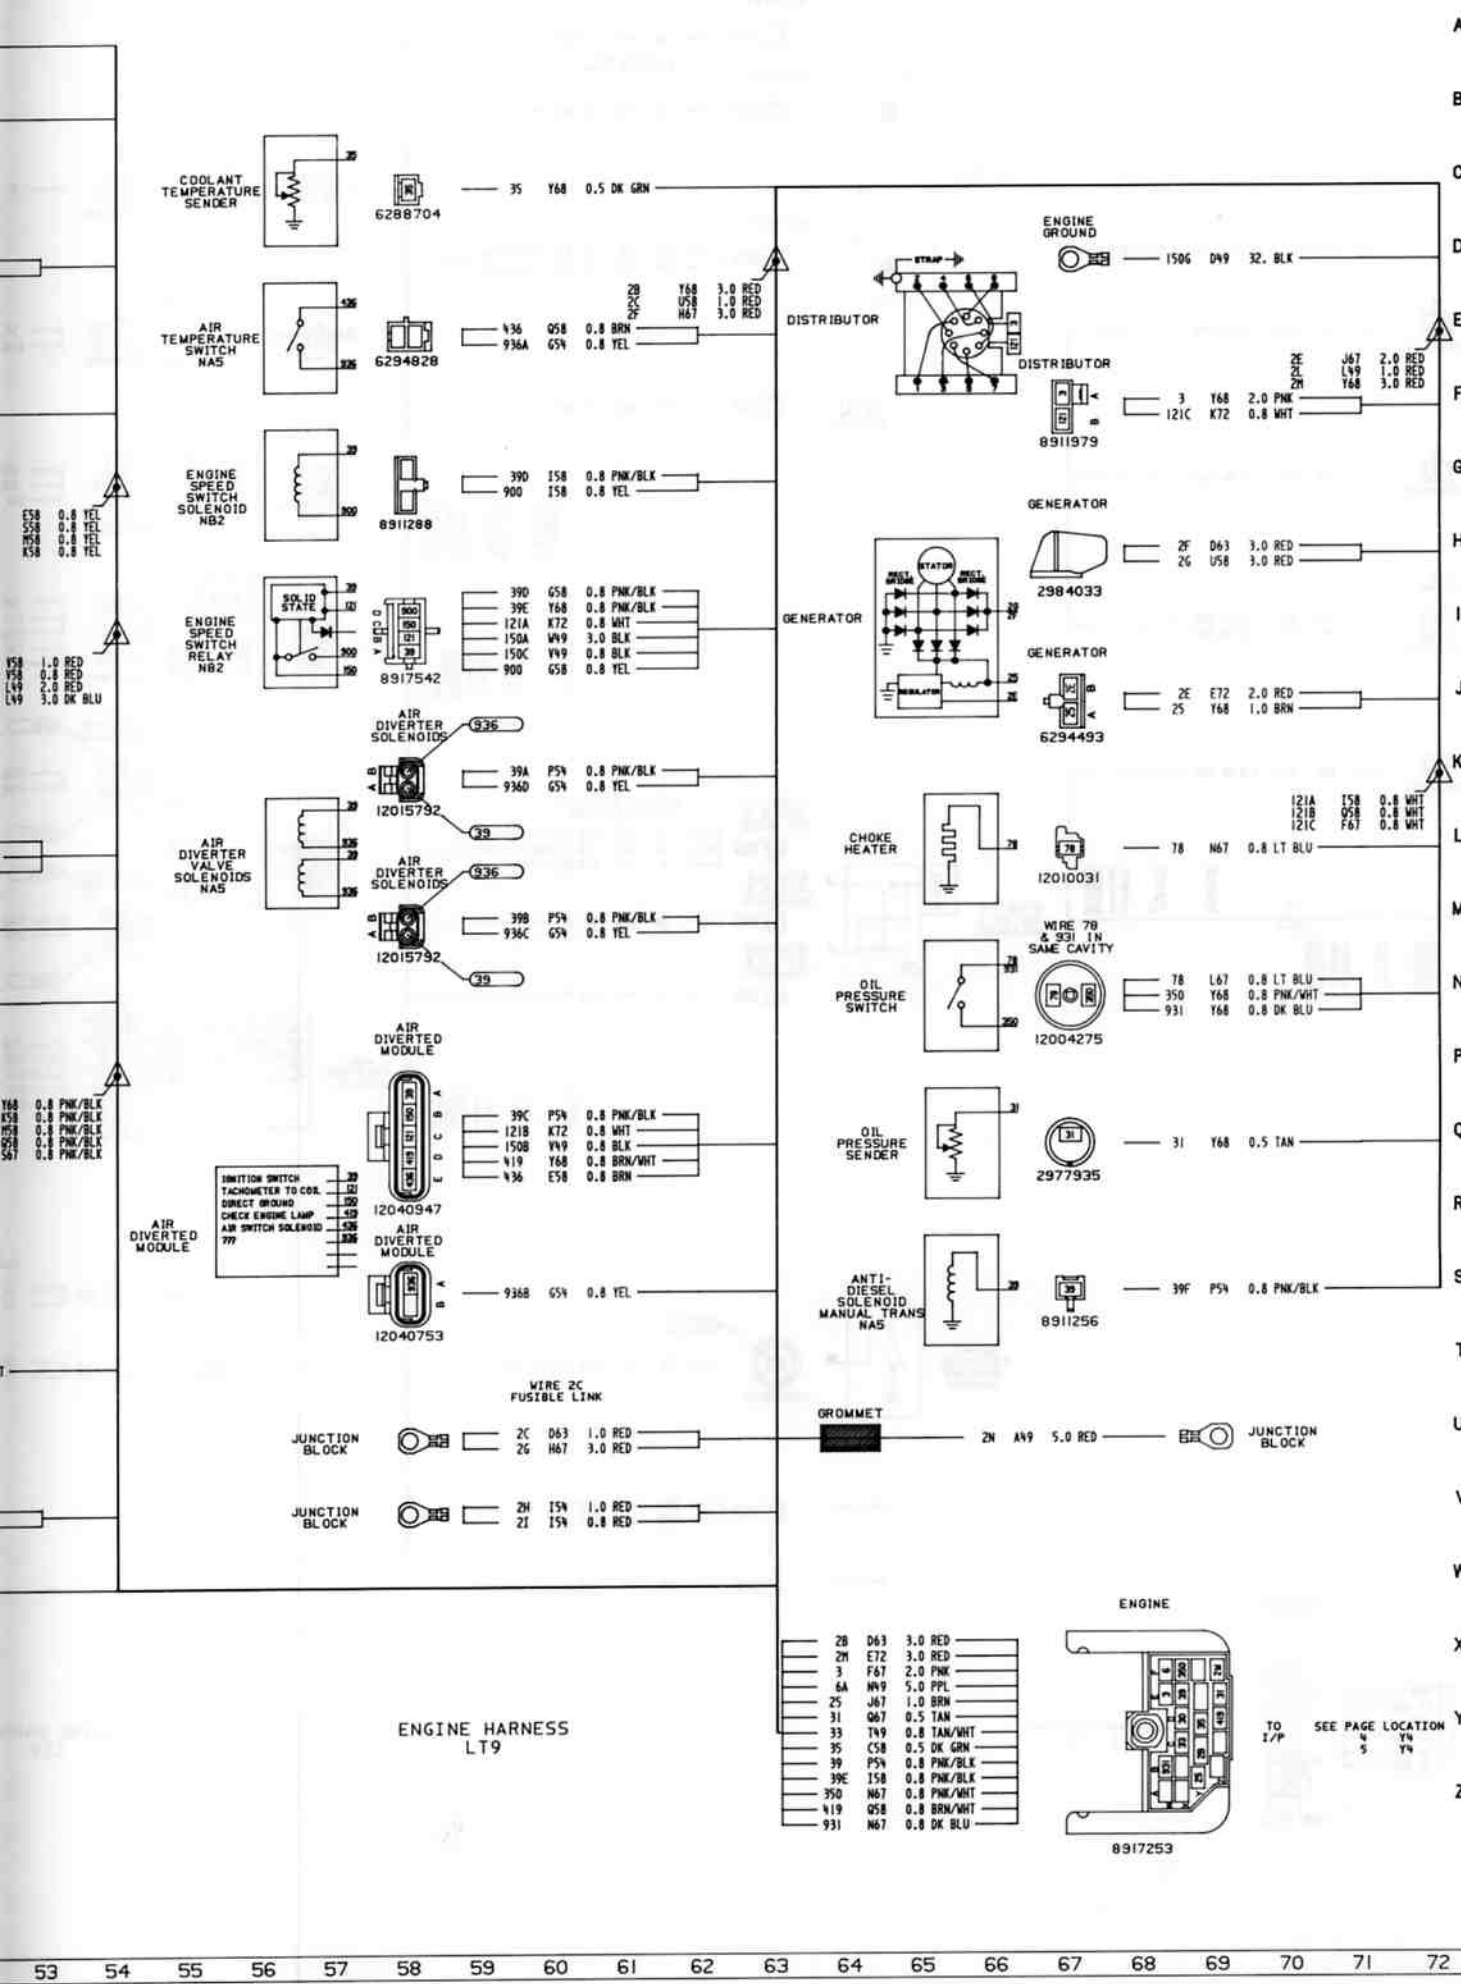


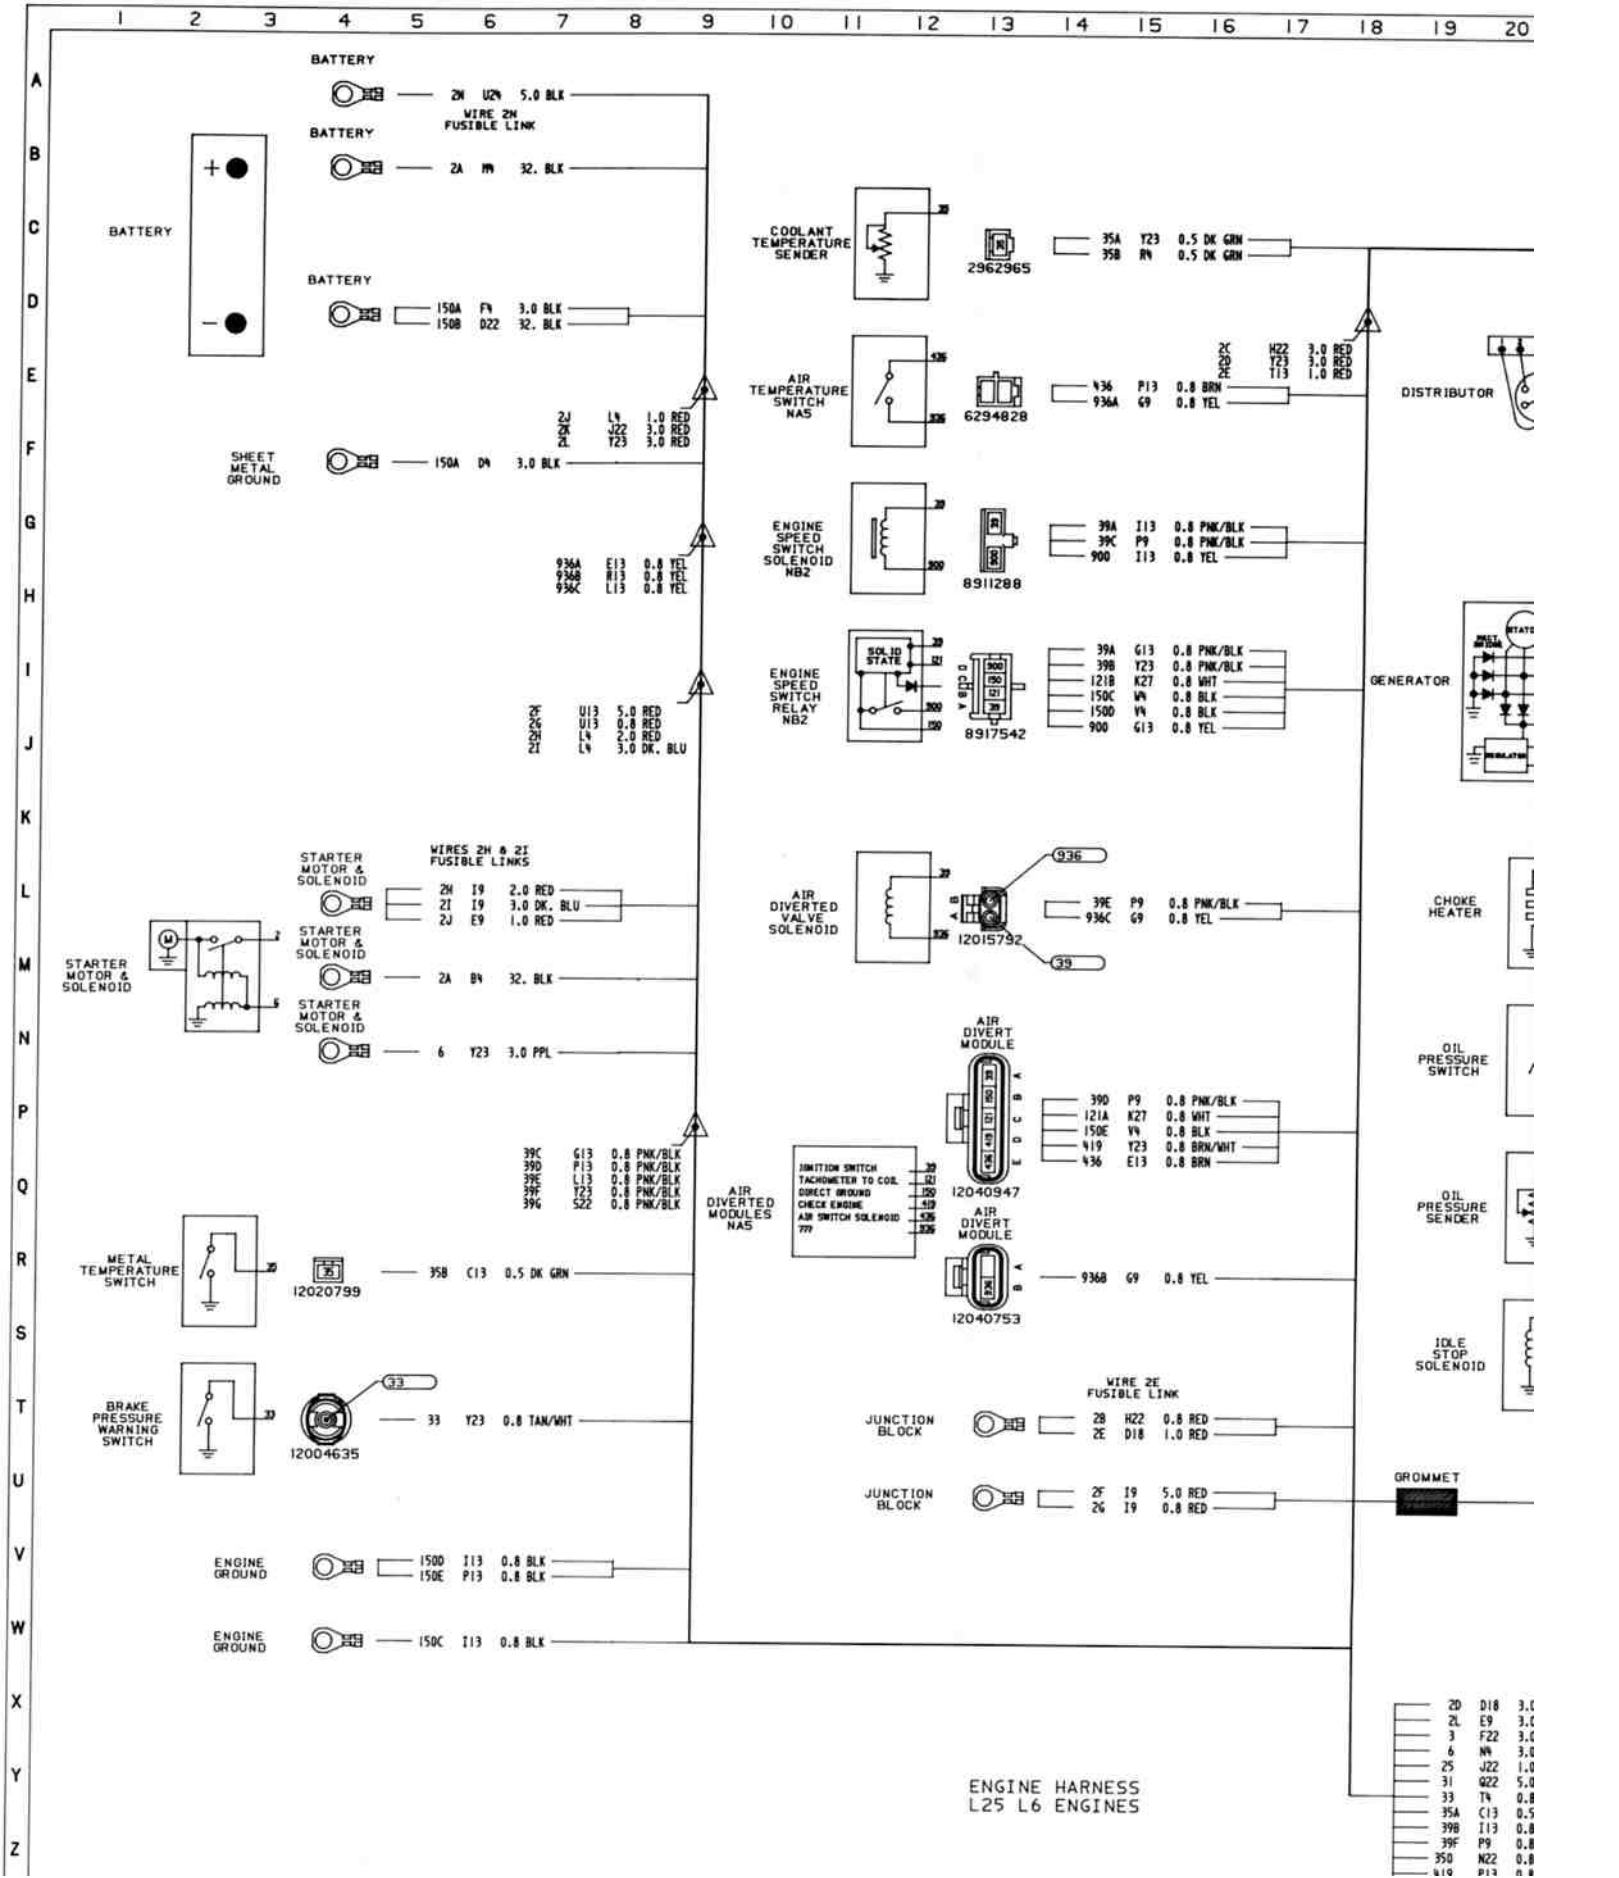


1.0 RED  
3.0 RED  
3.0 RED  
0.8 YEL  
0.8 YEL  
0.8 YEL  
0.8 RED  
0.8 RED  
0.8 DK. BLU


0.8 PINK/BLK  
0.8 PINK/BLK  
0.8 PINK/BLK  
0.8 PINK/BLK  
0.8 PINK/BLK

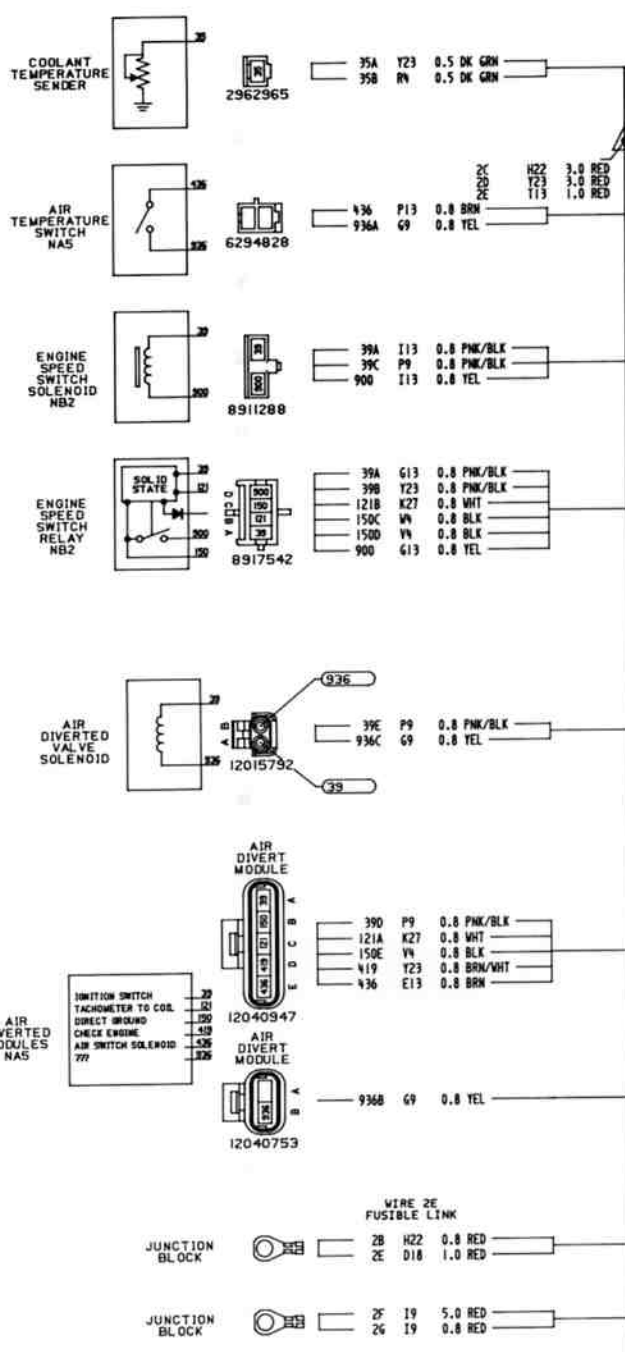


ENGINE HARNESS  
L25 L6 ENGINES

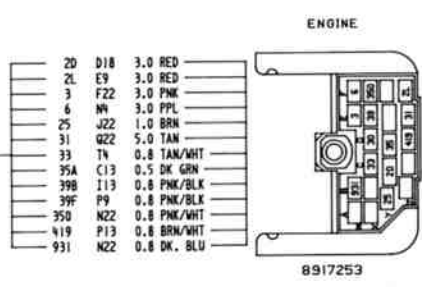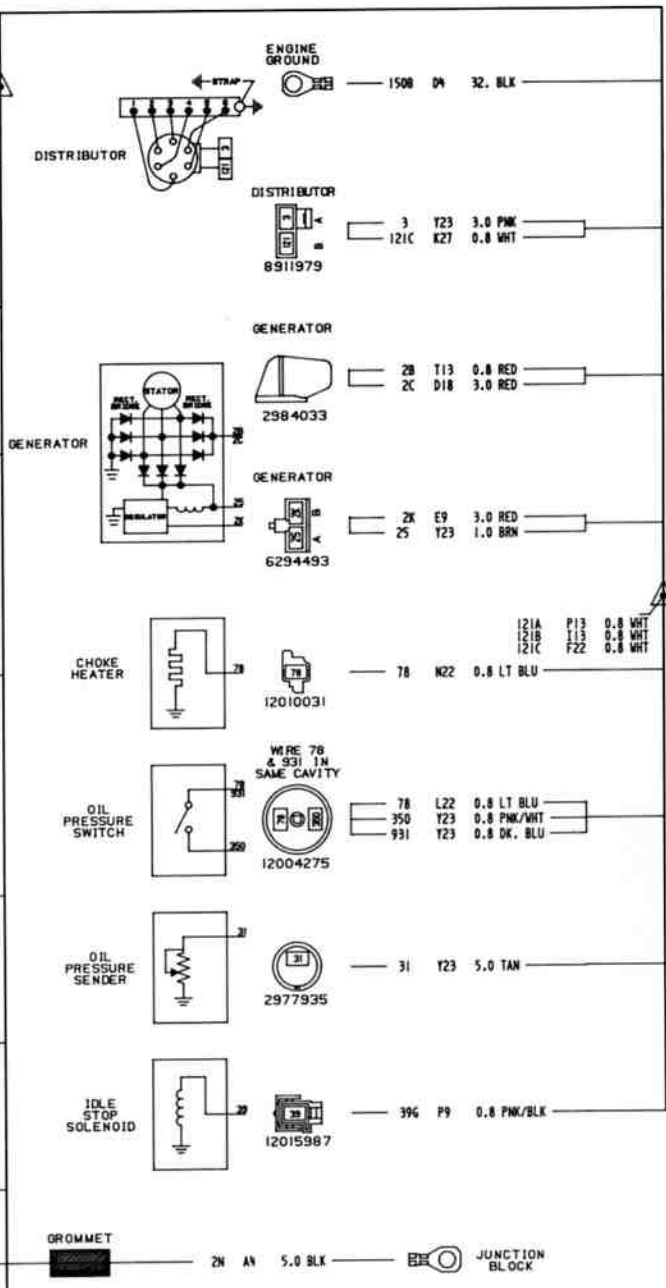

TO SEE PAGE LOCATION  
1/P 4 Y4  
5 Y4

 


RIGHT  
TURN  
SIGNAL  
LAMP

 


12004215

 LEFT  
TURN  
SIGNAL  
LAMP




6294125

 CHOKE  
WARNING  
LAMP




NO CONNECTOR  
NUMBER GIVEN

 CHECK  
ENGINE  
LAMP




NO CONNECTOR  
NUMBER GIVEN

HORN  
RELAY

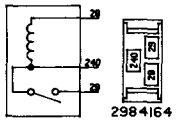


2984164

STOP  
LAMP  
SWITCH

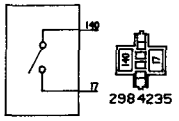


2984235

HAZARD  
FLASHERS

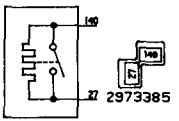

2973385

DIMMER  
SWITCH

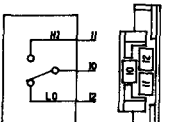

8900855

5A X31 3.0 YEL  
5B K13 3.0 YEL  
5C Q13 3.0 YEL  
  
150A X41 0.8 BLK  
150B L31 0.8 BLK  
150C R22 0.8 BLK  
150D C49 0.8 BLK  
150E T31 0.8 BLK  
150F X31 0.8 BLK  
150G B4 0.8 BLK  
150H D4 0.8 BLK


SEE PAGE LOCATION  
1 Y15

SEE PAGE LOCATION  
1 Y40  
1 Y68  
2 Y42  
2 Y68  
3 Y29

SEE PAGE LOCATION  
3 Y49

1/P

TO  
FORWARD LAMP  
&  
ENGINE  
BODY WIRING

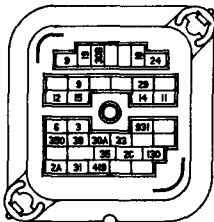


8917232

WIRES 2A & 2B IN SAME CAVITY

WIRE 30A JUMPERED IN CONNECTOR TO 30B


PAGE 4 P TRUCK

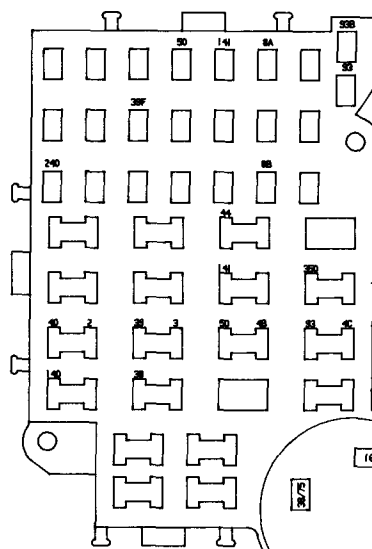

FUSE BLOCK  
SEE PAGE 6 FOR  
FUSE BLOCK DETAILS


WIRE 38 JUMPR IN CONN  
WIRE 50 JUMPR IN CONN  
WIRE 93 JUMPR IN CONN  
WIRE 141 JUMPR IN CONN

 NEUTRAL  
SAFETY  
SWITCH  
AUTO TRANS




8911921

 BACK UP  
LAMP  
SWITCH  
AUTO TRANS




2973407

 CLUTCH  
SWITCH  
MANUAL TRANS



8911921


BACK UP  
LAMP  
MANUAL TRANS

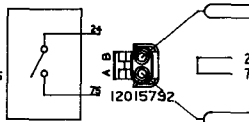

12015792

1/P

 1/P



2973407 8917095

 
2A Y4 3.0 RED  
3C N27 3.0 PNK  
4B G27 3.0 BRN  
4C G27 3.0 BRN  
8A M22 0.5 GRA  
8B X41 0.5 GRA  
16 P31 0.8 PPL  
39 Y4 0.5 WHI/BLK  
39F J31 0.5 PNK/BLK  
40 T31 1.0 ORN  
44 T31 1.0 DK GRN  
75A Q27 0.8 DK BLU  
93B D22 0.8 WHI  
140B H4 1.0 ORN  
240B J4 1.0 ORN  
350 Y4 0.8 PNK/WHI

39A L31 0.5 PNK/BLK  
39B X41 0.5 PNK/BLK  
39C X41 0.5 PNK/BLK  
39D C40 0.5 PNK/BLK  
39E Y4 0.5 PNK/BLK

WINDSHIELD  
WASHER  
MOTOR



WINDSHIELD  
WIPER  
WASHER  
SWITCH




WINDSHIELD  
WIPER  
SWITCH  
LAMP




INS  
F  
G

INS  
F  
G



10  
5

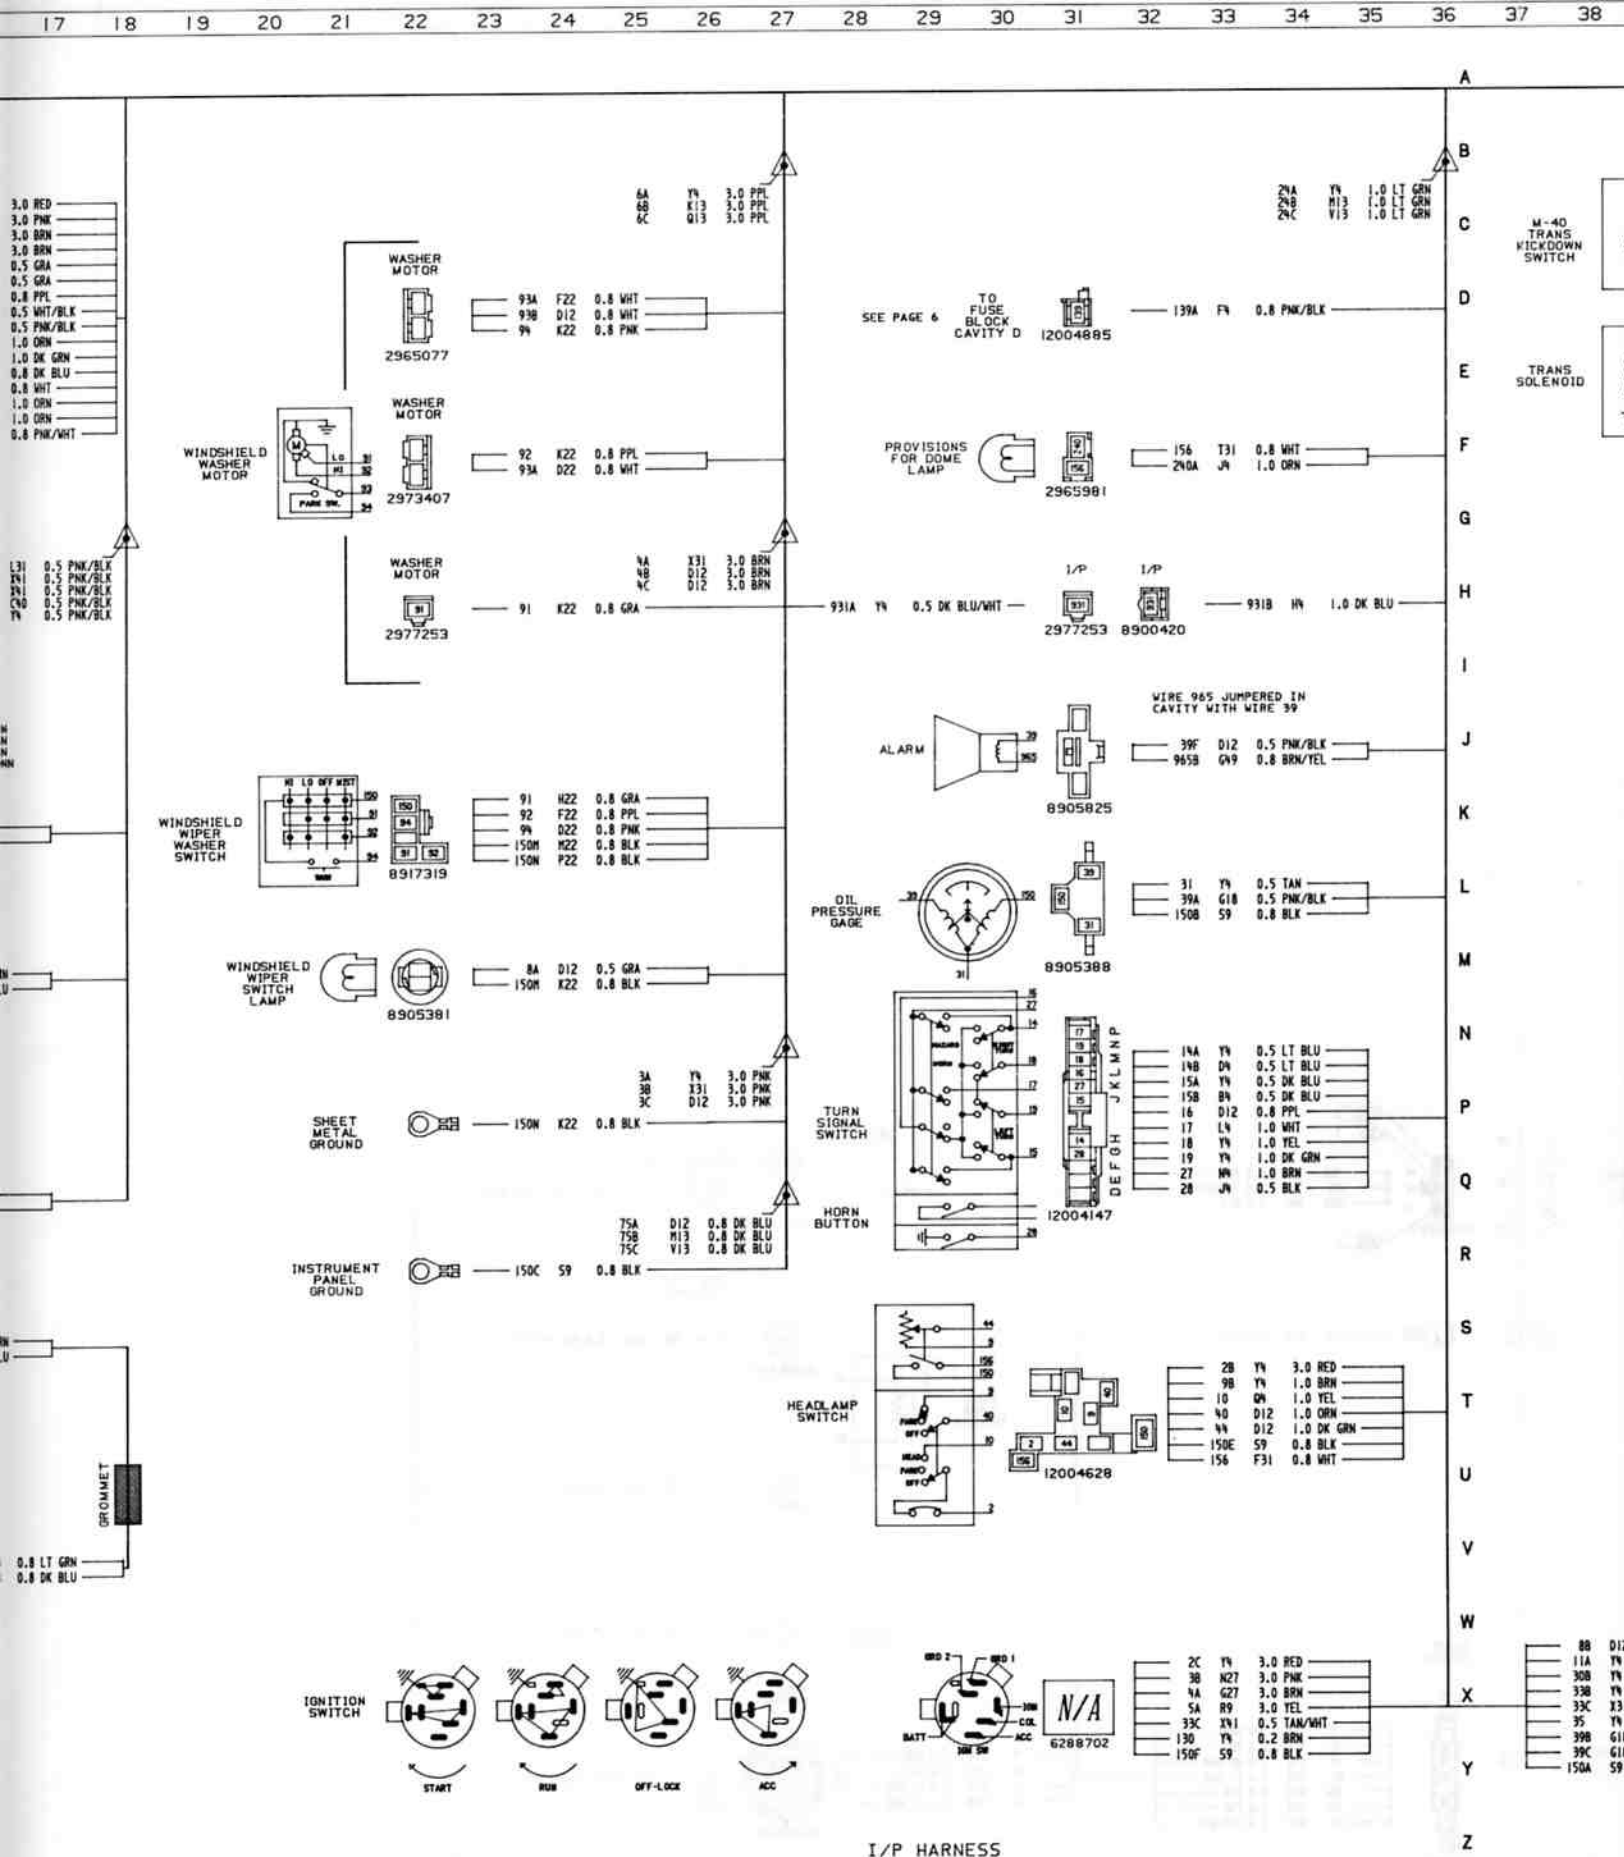








 
A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
P  
Q  
R  
S  
T  
U  
V  
W  
X  
Y  
Z

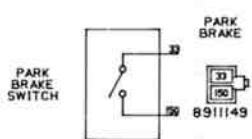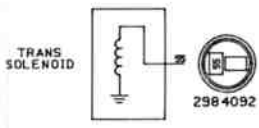


PARK BRAKE SWITCH OPTION

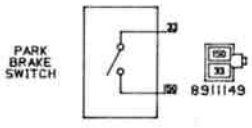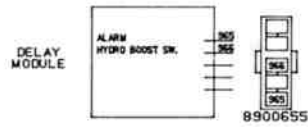

   33C E49 0.5 TAN/WHT  
33P P49 0.5 TAN/WHT  
965A G49 0.8 BRN/YEL  
DIODE SPLICE  
ANODE TO 965  
CATHODE TO 33E433F

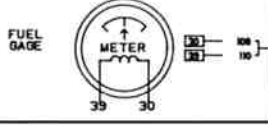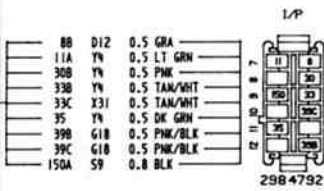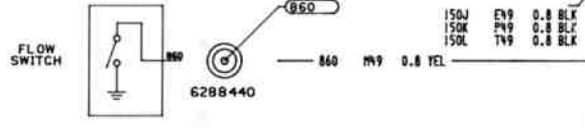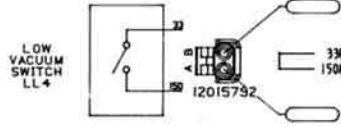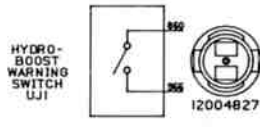


INSTRUMENT CLUSTER

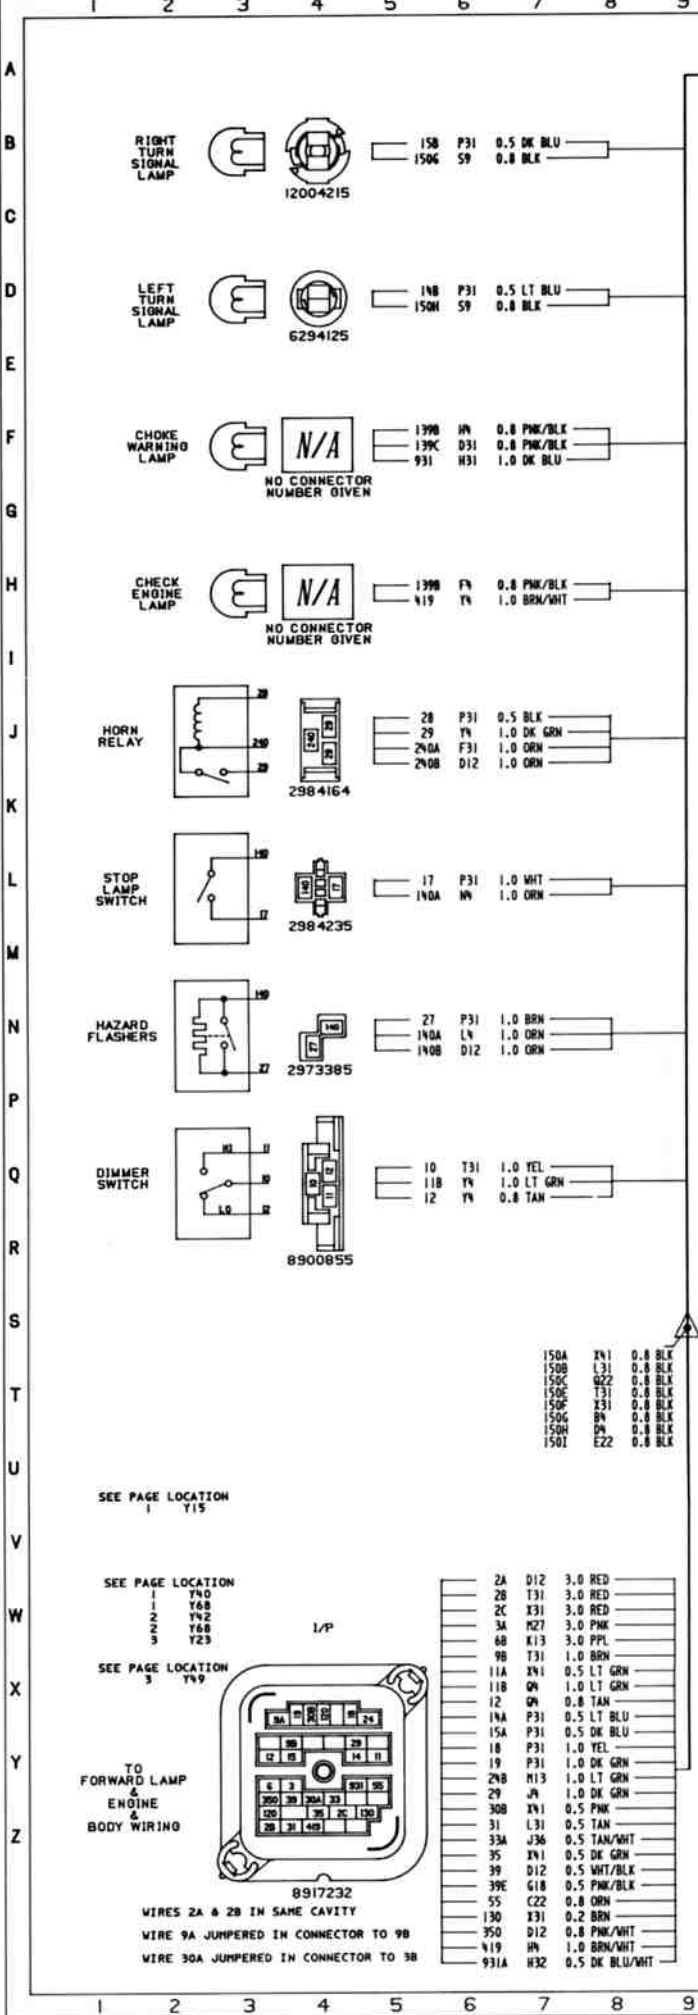



|      |     |         |
|------|-----|---------|
| 150A | XN1 | 0.8 BLK |
| 150B | L31 | 0.8 BLK |
| 150C | Q22 | 0.8 BLK |
| 150E | T31 | 0.8 BLK |
| 150F | X31 | 0.8 BLK |
| 150G | BN  | 0.8 BLK |
| 150H | DN  | 0.8 BLK |
| 150I | E22 | 0.8 BLK |

|      |     |                |
|------|-----|----------------|
| 2A   | D12 | 3.0 RED        |
| 2B   | T31 | 3.0 RED        |
| 2C   | X31 | 3.0 RED        |
| 3A   | H27 | 3.0 PNK        |
| 6B   | K13 | 3.0 PPL        |
| 9B   | T31 | 1.0 BRN        |
| 11A  | XN1 | 0.5 LT GRN     |
| 11B  | GN  | 1.0 LT GRN     |
| 12   | GN  | 0.8 TAN        |
| 14A  | P31 | 0.5 LT BLU     |
| 15A  | P31 | 0.5 DK BLU     |
| 18   | P31 | 1.0 YEL        |
| 19   | P31 | 1.0 DK GRN     |
| 24B  | H13 | 1.0 LT GRN     |
| 29   | JN  | 1.0 DK GRN     |
| 30B  | XN1 | 0.5 PNK        |
| 31   | L31 | 0.5 TAN        |
| 33A  | J36 | 0.5 TAN/WHI    |
| 35   | XN1 | 0.5 DK GRN     |
| 39   | D12 | 0.5 WHI/BLK    |
| 39E  | G18 | 0.5 PNK/BLK    |
| 55   | C22 | 0.8 GRN        |
| 130  | X31 | 0.2 BRN        |
| 350  | D12 | 0.8 PNK/WHI    |
| 419  | HN  | 1.0 BRN/WHI    |
| 931A | H32 | 0.5 DK BLU/WHI |


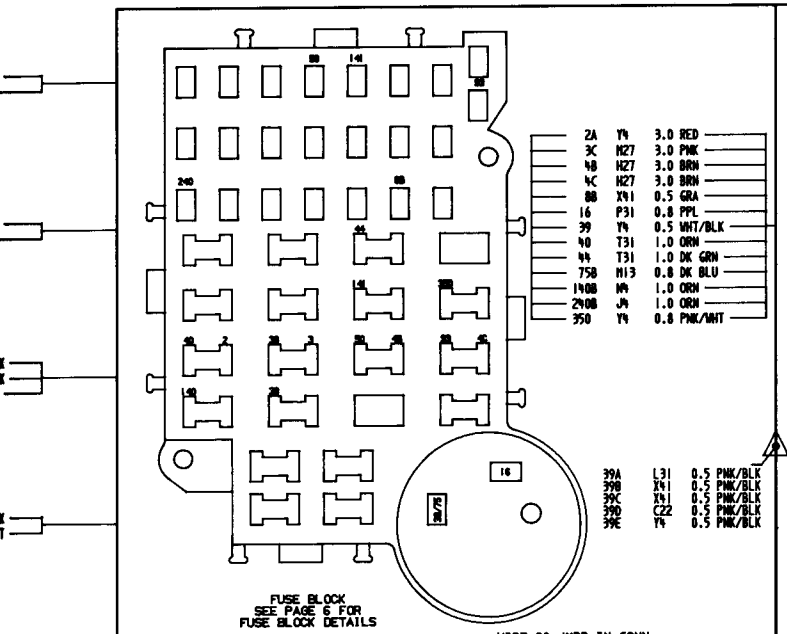


FUSE BLOCK  
SEE PAGE 6 FOR  
FUSE BLOCK DETAILS

WIRE 38 JHPR IN CONN  
WIRE 50 JHPR IN CONN  
WIRE 99 JHPR IN CONN  
WIRE 141 JHPR IN CONN

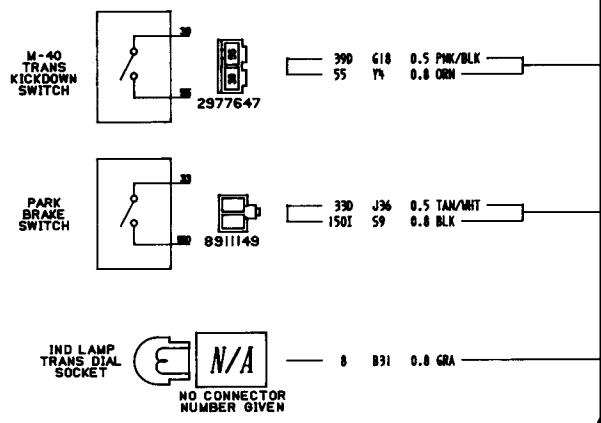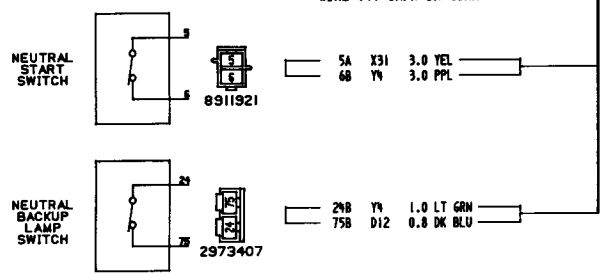


 4A X31 3.0 BRN  
4B D12 3.0 BRN  
4C D12 3.0 BRN

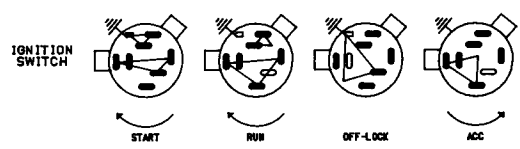


I/P HARNE


- Y41 0.8 BLK
  - L31 0.8 BLK
  - C22 0.8 BLK
  - T31 0.8 BLK
  - X31 0.8 BLK
  - W4 0.8 BLK
  - J4 0.8 BLK
  - C22 0.8 BLK
- 
- 3.0 RED
  - 3.0 RED
  - 3.0 RED
  - 3.0 PNK
  - 3.0 PPL
  - 1.0 BRN
  - 0.5 LT GRN
  - 1.0 LT GRN
  - 0.8 TAN
  - 0.5 LT BLU
  - 0.5 DK BLU
  - 1.0 TEL
  - 1.0 DK GRN
  - 1.0 LT GRN
  - 1.0 DK GRN
  - 0.5 PNK
  - 0.5 TAN
  - 0.5 TAN/WHT
  - 0.5 DK GRN
  - 0.5 WHT/BLK
  - 0.5 PNK/BLK
  - 0.8 GRN
  - 0.2 BRN
  - 0.8 PNK/WHT
  - 1.0 BRN/WHT
  - 0.5 DK BLU/WHT

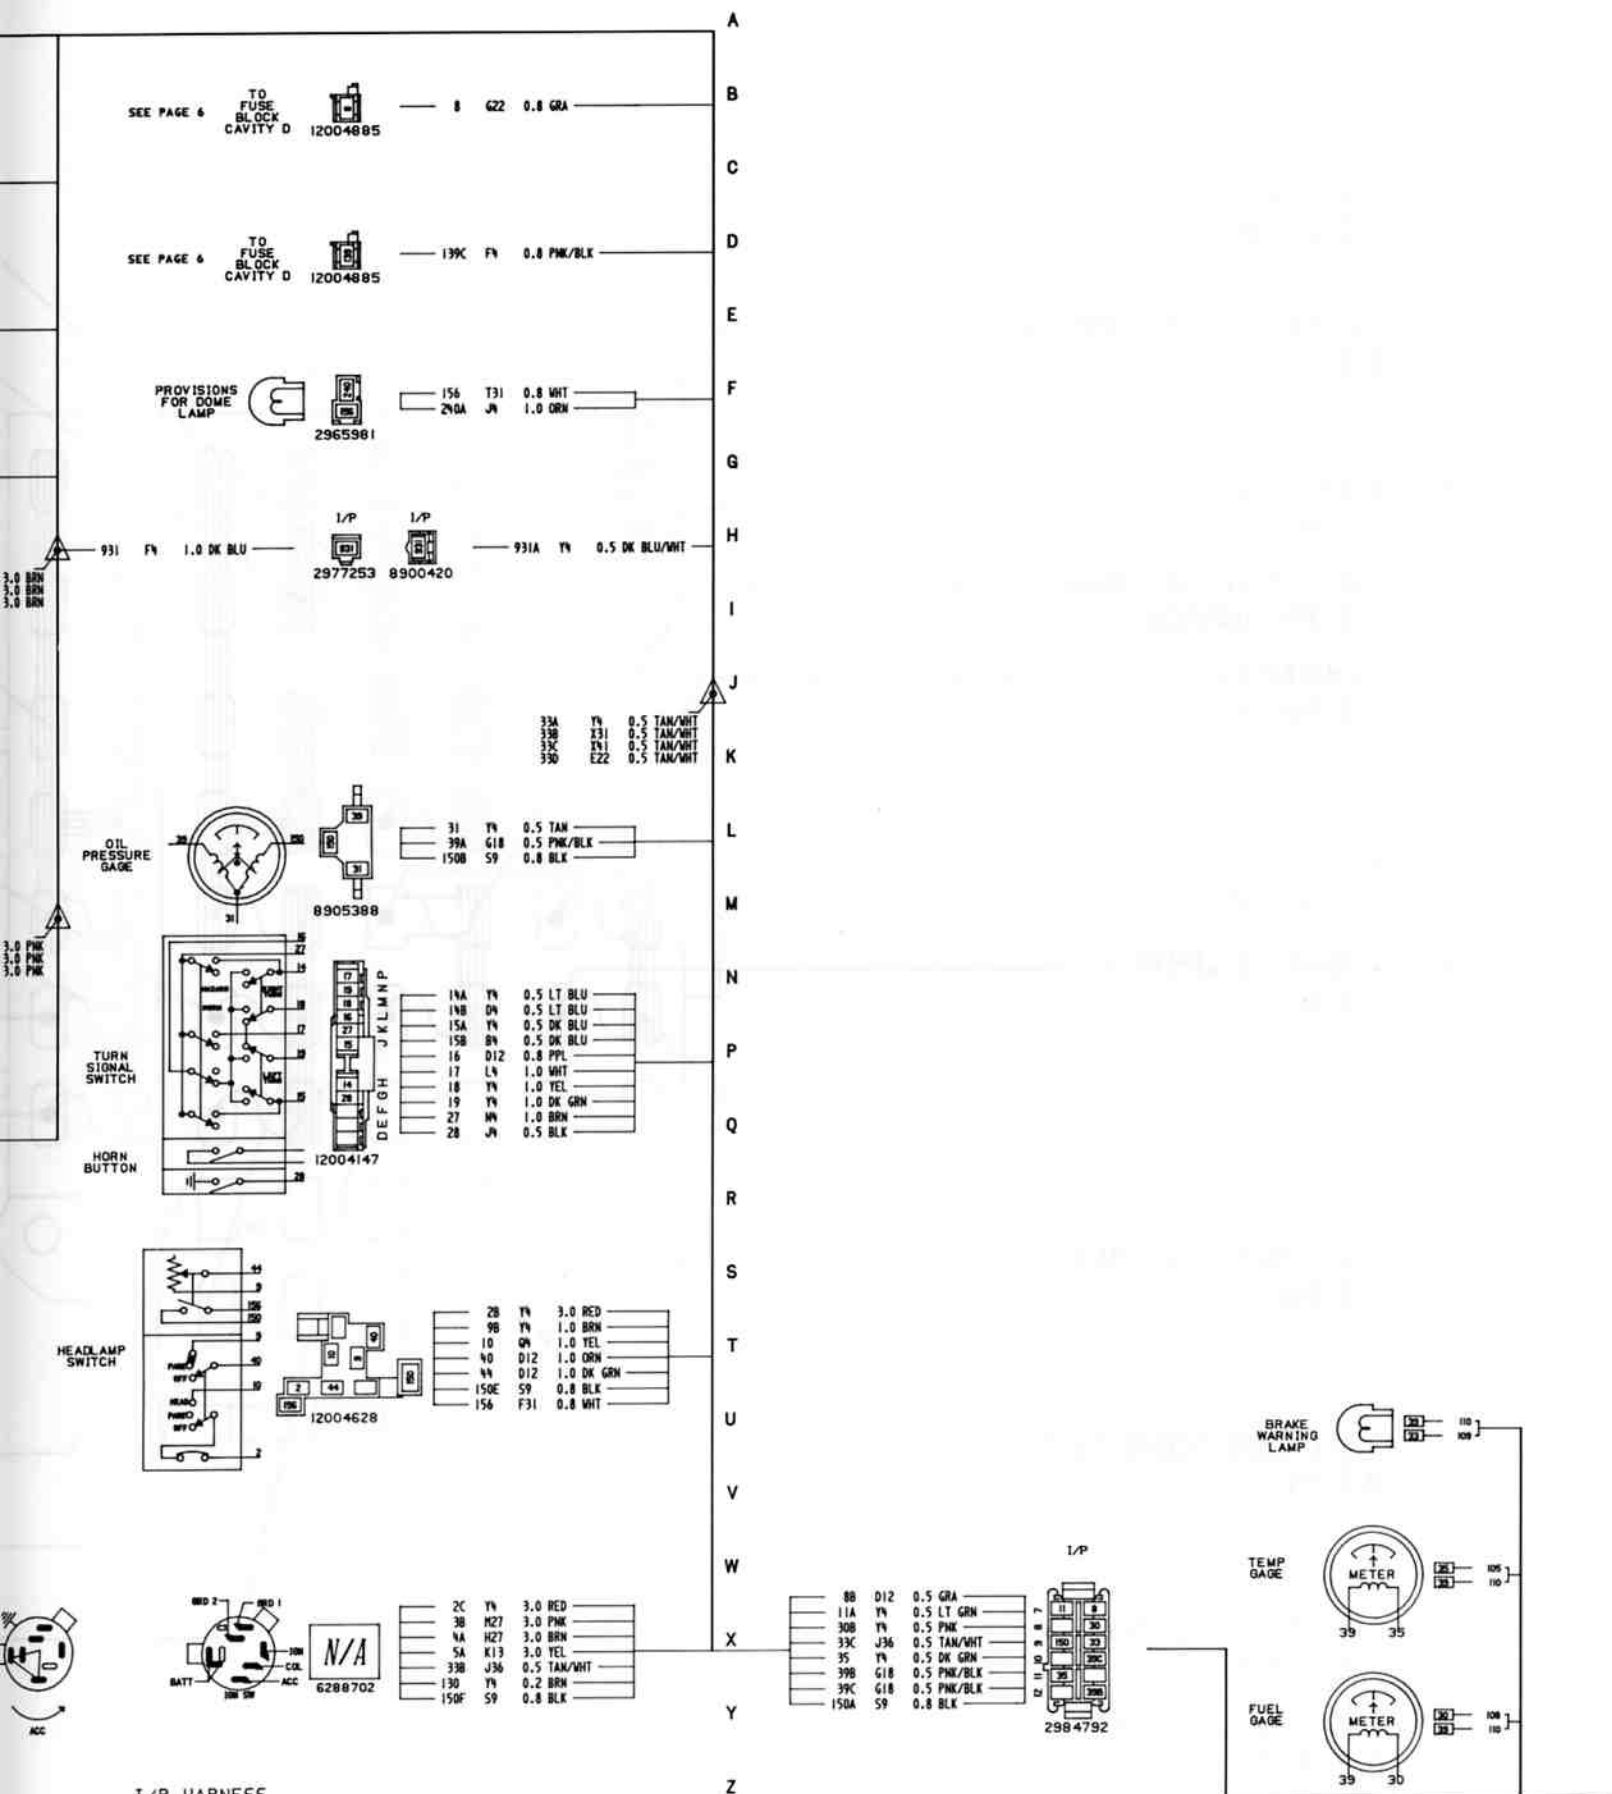

INSTRUMENT CLUSTER

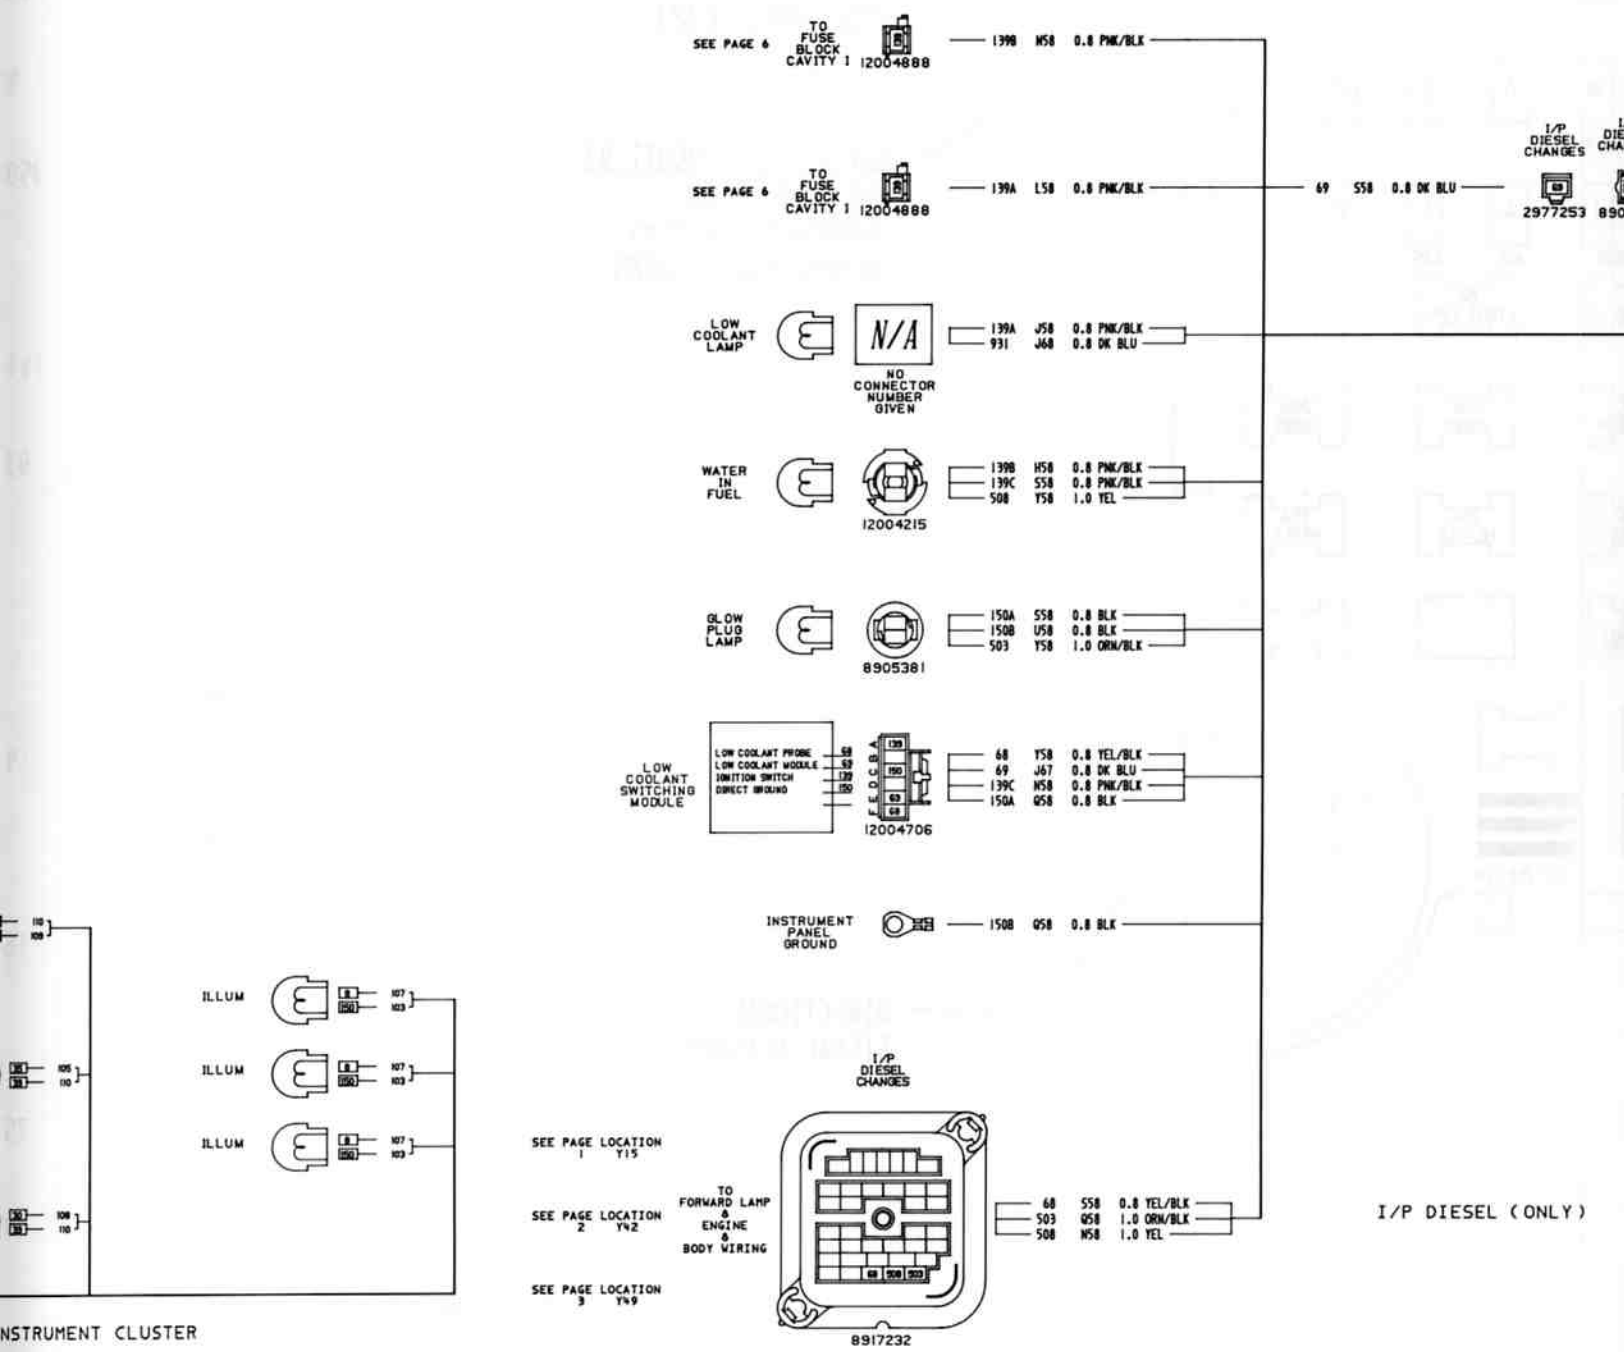

INSTRUMENT CLUSTER

 

CAVITY 'W' CIRCUIT 50  
IGNITION "ON" 25A FUSED FEED  
-HEATER & A/C


CAVITY 'B' CIRCUIT 140  
BATTERY 15A FUSED FEED  
-CLOCK  
-CIGAR LIGHTER  
-DOOR JAMB SWITCH  
-DOME/CARGO LAMPS

CAVITY 'I' CIRCUIT 39  
IGNITION "ON & CRANK" 20A FUSED FEED  
-AUTO TRANS  
-DIESEL INDICATOR LAMP  
-BRAKE WARNING  
-LOW COOLANT INDICATOR/CHOKE LAMPS  
-FUEL PUMP FEED


|   | COLOR  | MALE CONNECTOR |
|---|--------|----------------|
| A | BRN    | 12004887       |
| B | BLK    | 12004886       |
| H | DK GRA | 12004740       |
| I | WHT    | 12004888       |
| L | GRN    | 12004885       |
| P | RED    | 12004883       |
| W | BLU    | 12004884       |

| FUSES       | AMP | COLOR  |
|-------------|-----|--------|
| 12004003 ND | 3   | VIO    |
| 12004006 ND | 75  | BRN    |
| 12004005 ND | 5   | TAN    |
| 12004007 ND | 10  | RED    |
| 12004009 ND | 20  | YEL    |
| 12004010 ND | 25  | WHT    |
| 12004011 ND | 30  | LT GRN |

ND SHOWN ON 12004001

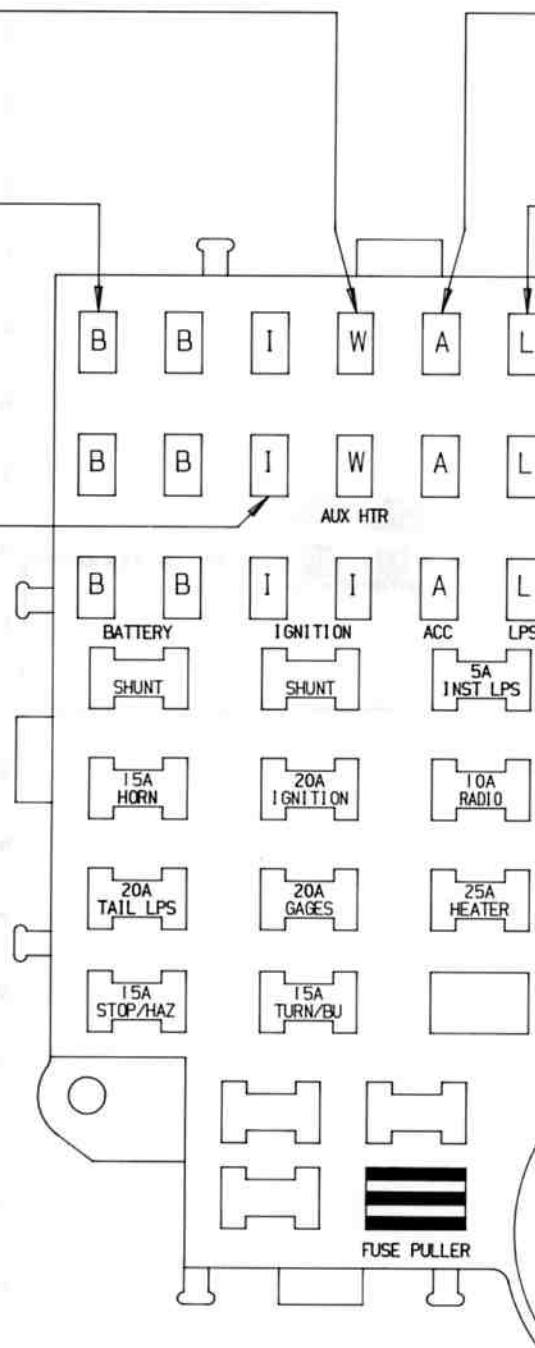

12034359 FUSE BLOCK

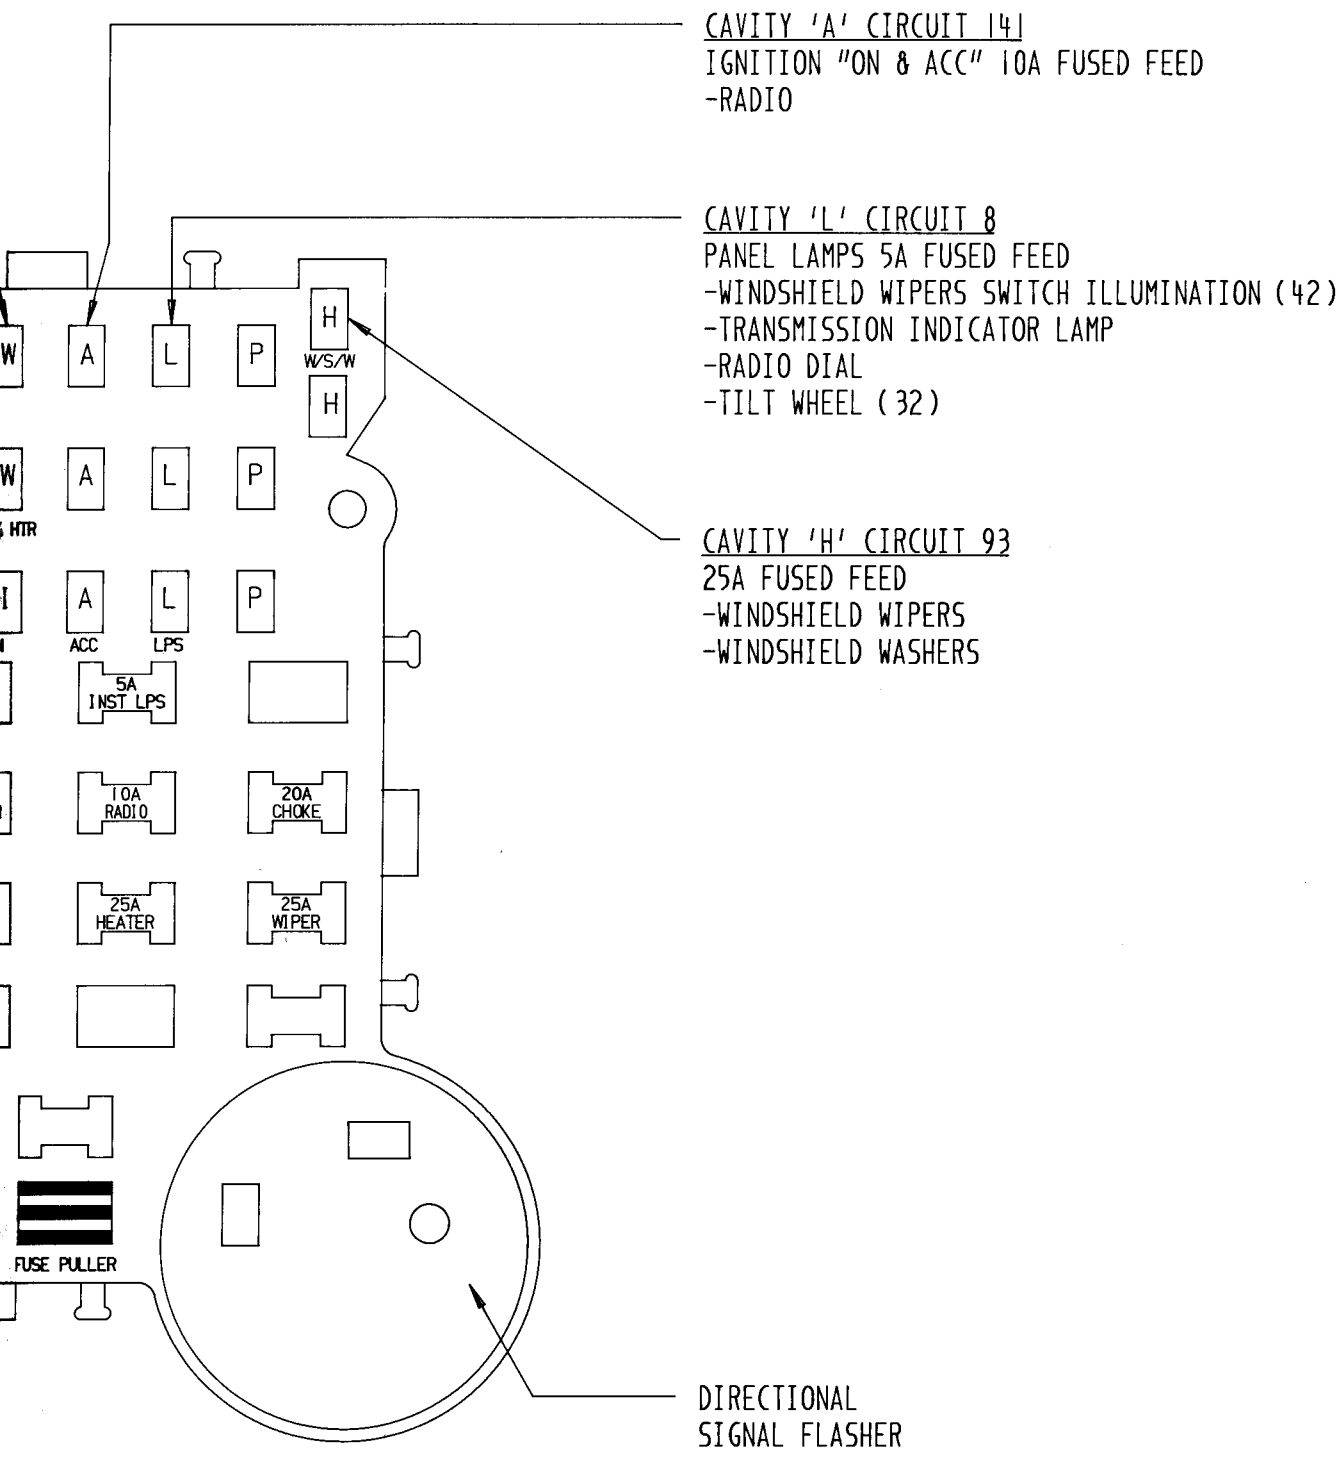

|   |     |
|---|-----|
| A |     |
| B |     |
| C | 44  |
| D |     |
| E | 8   |
| F |     |
| G | 93  |
| H | 4   |
| I |     |
| J | 350 |
| K |     |
| L | 141 |
| M |     |
| N | 93  |
| P |     |
| Q |     |
| R |     |
| S | 4   |
| T |     |
| U | 16  |
| V |     |
| W |     |
| X | 75  |
| Y | 38  |
| Z |     |

A  
B  
C 44 - LIGHT SWITCH  
1.0 DK GRN

D  
E 8 - INSTRUMENT PANEL LAMPS  
0.5 GRA

F  
G 93 - WINDSHIELD WIPERS  
3.0 WHT

H  
I 4 - IGNITION SWITCH (ON/ACC)  
3.0 ORN (UNFUSED)

J 350 - TO BULKHEAD  
0.8 PNK/WHT

K  
L 141 - RADIO (ACC)  
1.0 BRN/WHT

M  
N 93 - WINDSHIELD WIPERS  
3.0 WHT


O  
P  
Q  
R 4 - IGNITION SWITCH (ON/ACC)  
3.0 BRN


S  
T  
U 16 - DIRECTIONAL SIGNAL SWITCH  
0.8 PPL

V  
W 75 - BACK UP LAMP SWITCH  
0.8 DK BLU

X  
Y 38 - TURN & BACK UP LAMPS  
0.8 DK BLU  
Z

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
P  
Q  
R  
S  
T  
U  
V  
W  
X  
Y  
Z

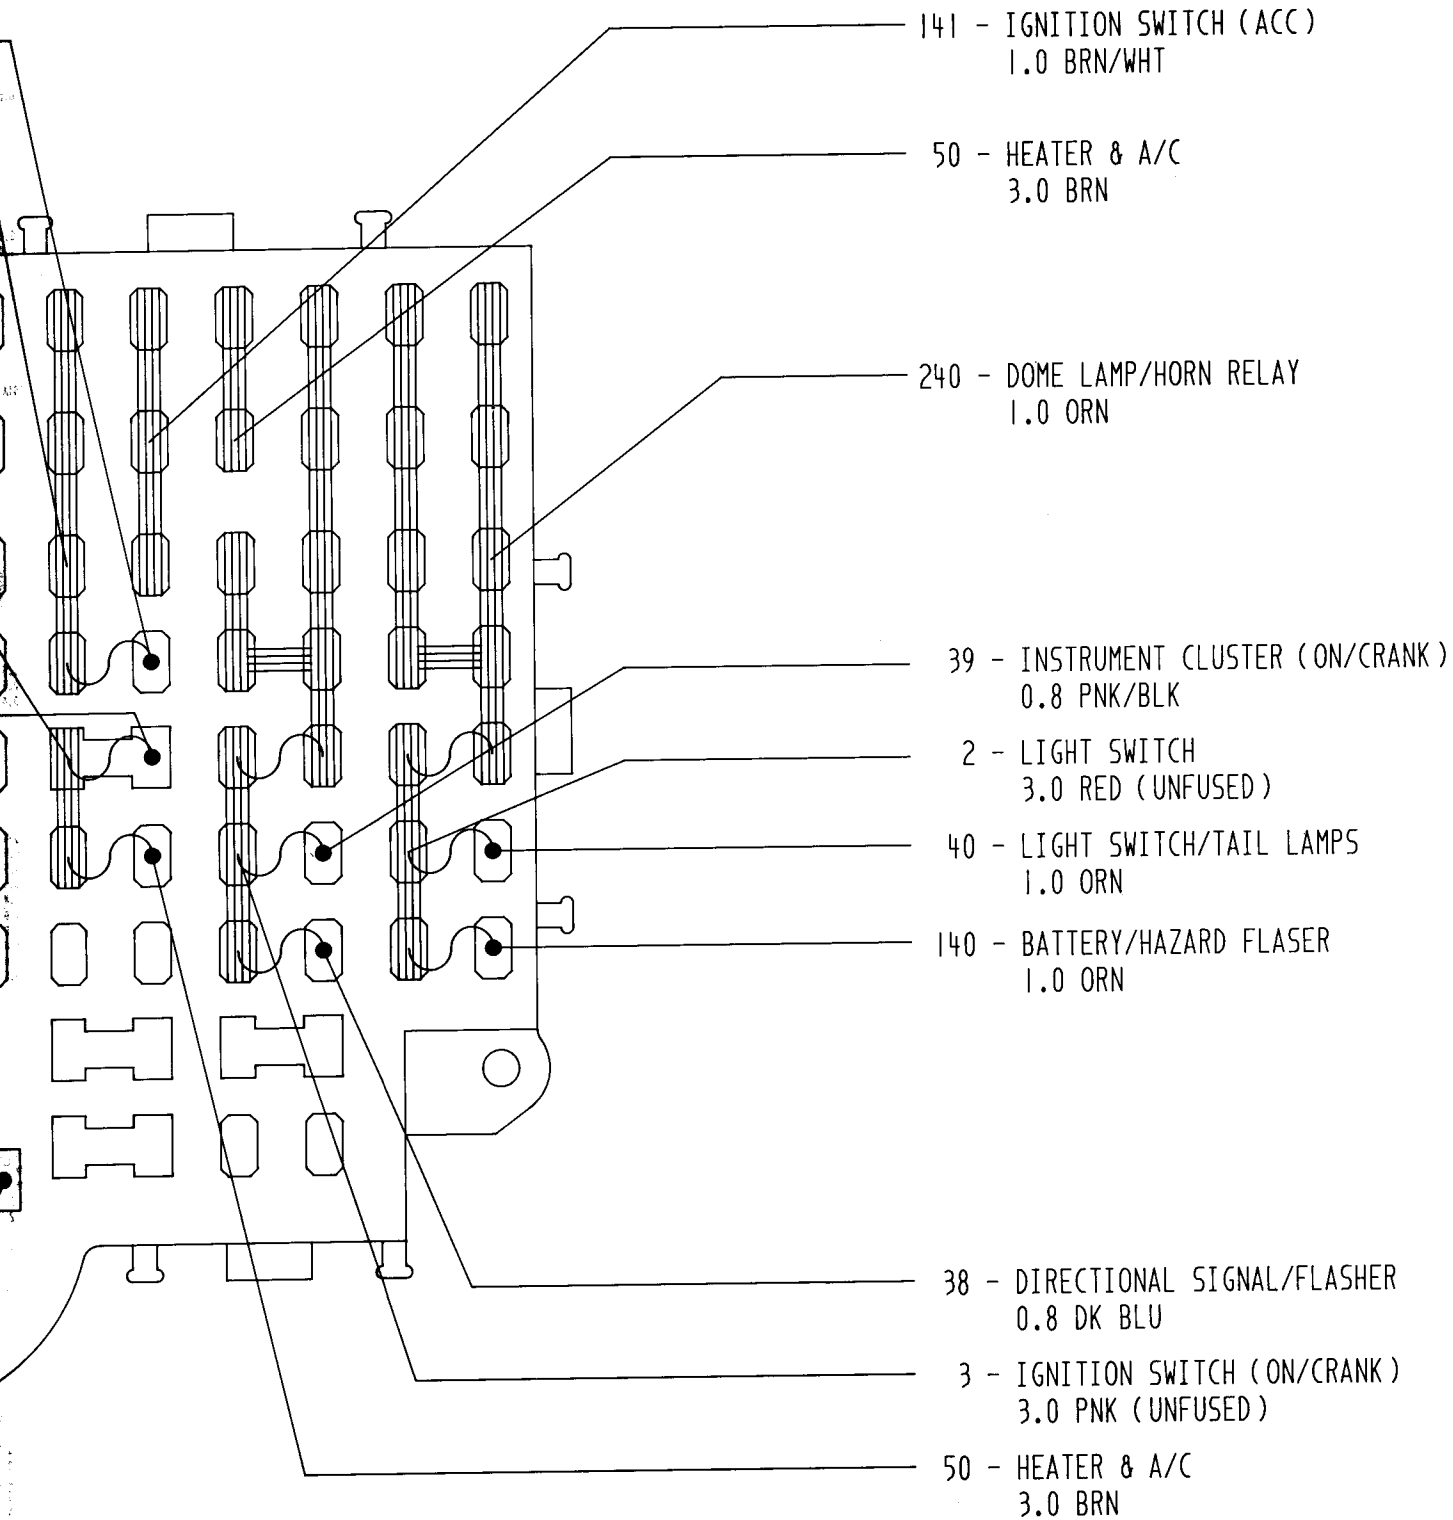

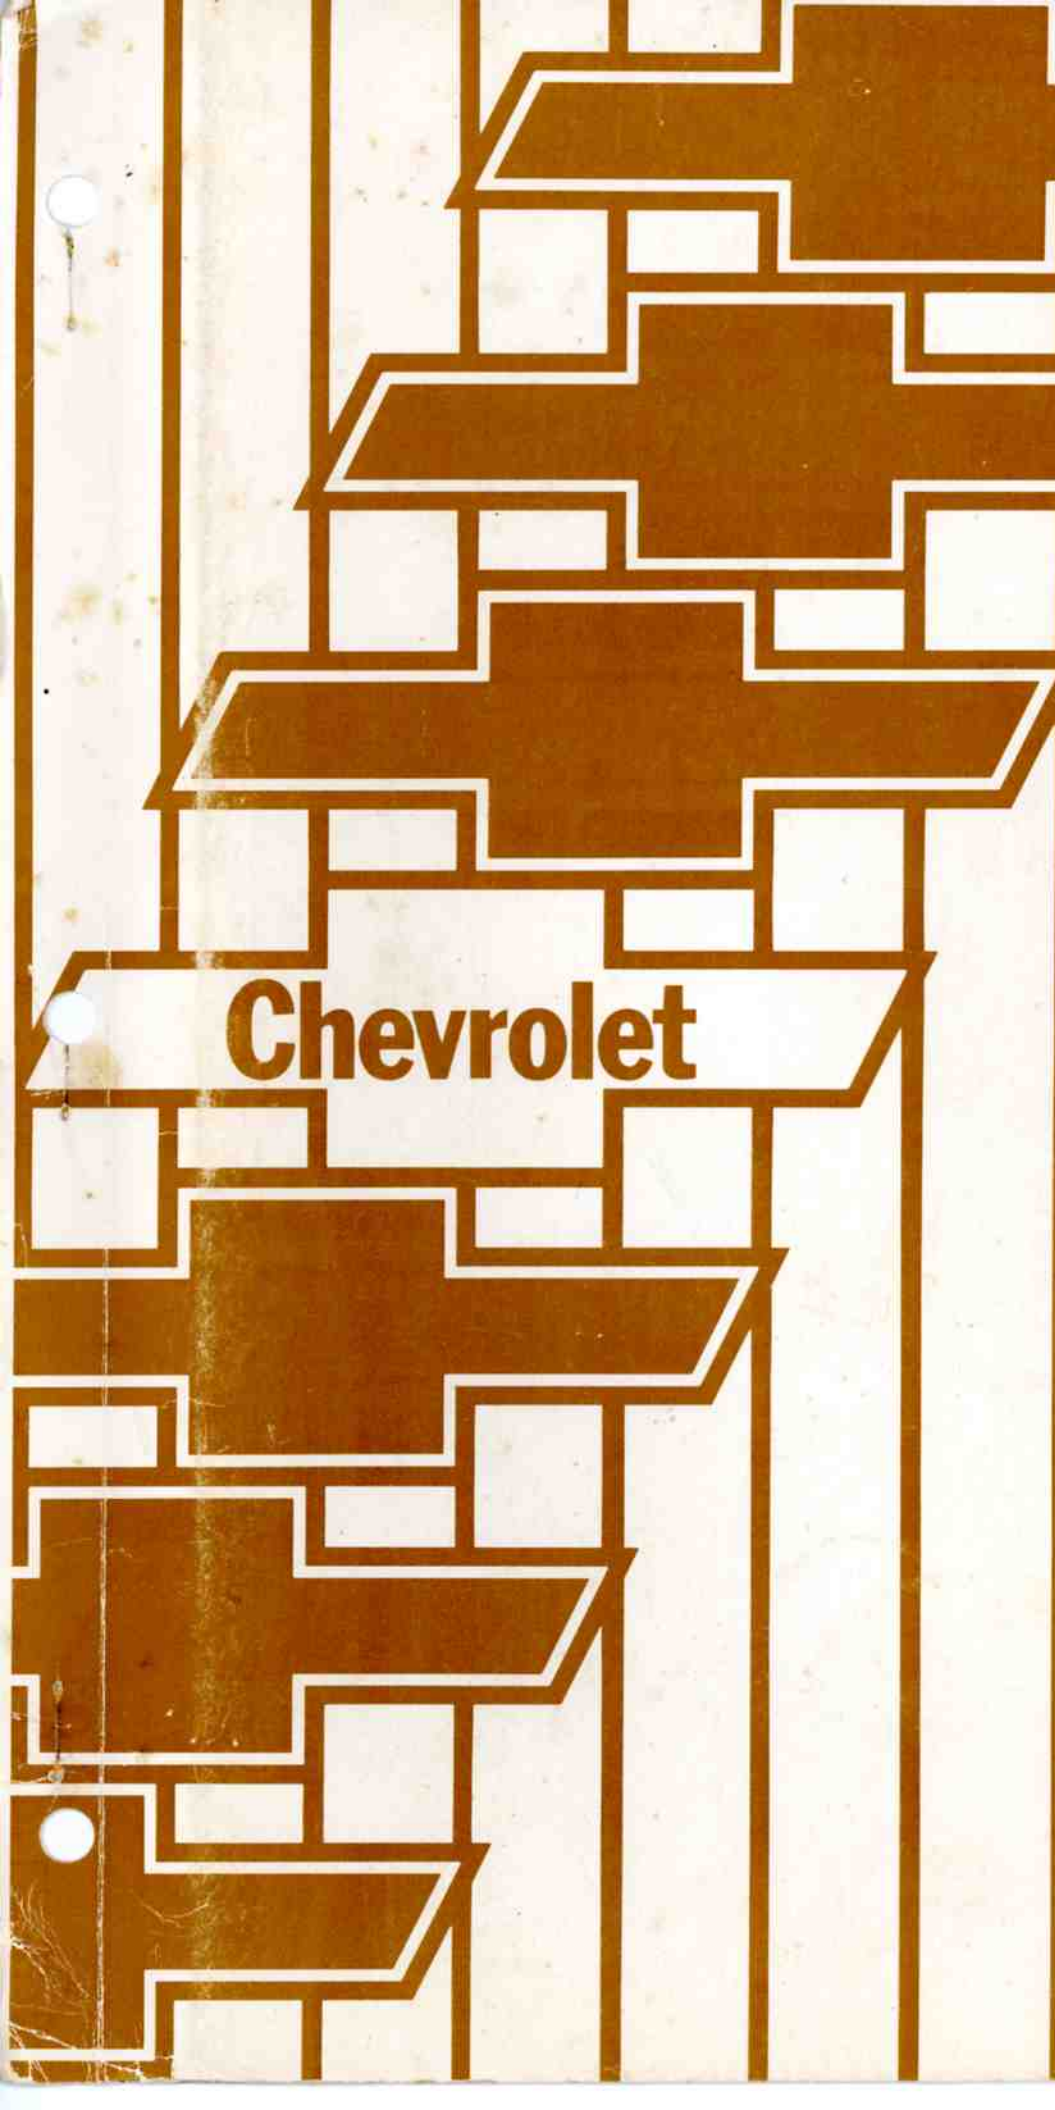

**Chevrolet**

**10-30  
SERIES**

**1986**

**LIGHT  
DUTY  
TRUCK**

**Wiring  
Diagrams**



ST-330-86 WD